



# 曲折缝缝纫机

---

## ZIGZAG SEWING MACHINE

使用说明书  
零件手册  
OPERATION MANUAL  
PARTS BOOK

中国·中捷缝纫机股份有限公司  
ZOJE SEWING MACHINE CO., LTD.

## CONTENTS

1. Application.....	1
2. Secure operation.....	1
3. Caution before operation.....	1
4. Lubrication.....	1
5. Selection of needle and thread.....	2
6. Inserting of needle.....	2
7. Replacing bobbin.....	2
8. Thread the bobbin case.....	2
9. The installation of the bobbin.....	3
10. Thread surface stitches.....	3
11. Adjusting stitch length.....	4
12. Adjusting presser foot pressure.....	4
13. Adjusting needle thread tension.....	4
14. Regulate the length and tension of take-up spring.....	4
15. Adjust bobbin thread tension.....	5
16. Adjust needle position.....	5
17. The adjustment of horizontal distance.....	5
18. Locking unit for linear stitching.....	6
19. Assemblage of belt cover.....	6
20. Mount knee lifter.....	6
21. Modes of several sewing stitch and application of accessory.....	7
22. Maintenance of machine.....	9
23. Main specification.....	9

## 一、用途

### 1. APPLICATION

该机广泛用作服装、床上用品、鞋邦、毛巾、壁毯等的薄、中、厚料曲折缝、曲折刺绣缝或直缝。

采用了高精度的机械传动和有效的膝控摆幅部件，确保了形成多种线缝的完美质量。

This series of zigzag sewing machine is used to zigzag, embroidery and lockstitch on thin, medium and thick material for garment, bed articles, shoes, towels and wall carpet.

Extra accurate mechanical transmission and knee-control swing range unit assure many kinds of perfect embroidery stitch.

## 二、安全操作事项

### 2. SECURE OPERATION

1. 操作人员须经适当培训并仔细阅读该使用说明书后，方可使用；

2. 使用机器时，安全装置必须安装齐全；

3. 当拆换机器部件（如：机针、压脚、针板、送料牙和核心等），穿线、岗位上无操作人员或维修工时，必须关闭电源开关或拔下电源插头；

4. 机器的维修、调整等工作必须由专业技术人员进行；

5. 电气设备的使用必须由电工或专业技术人员进行。

1) The operator should be trained, and understand this manual very well before operating.

2) All security equipments should be fixed very well while running the machine.

3) Turn off the power or draw the power off, while unfixing sew accessories (like needle, presser foot, needle plate, feed dog and bobbin case), winding thread and no operator is at the workplace maintaining the machine.

4) Maintenance and adjustment of the machine should be carried by professional technician.

5) The electricity equipment should be managed by wireman or professional technician.

## 三、操作前的注意事项

### 3. CAUTION BEFORE OPERATION

为避免机器损坏，必须彻底注意下列事项：

1. 首次使用机器时，必须彻底清洗、充分加油；
2. 检查电机电压是否正常，连接相位是否正常；
3. 上轮一定要朝操作者方向运转。

To avoid the damage of machine, do care of the following:


1) Please clean the machine thoroughly, add enough oil before first usage.

2) Check the normalcy of voltage connecting oil before first usage.


3) The upper wheel should rotate in the direction facing the operator.

## 四、机器的润滑(图1、2)

### 4. LUBRICATION(Fig.1,2)

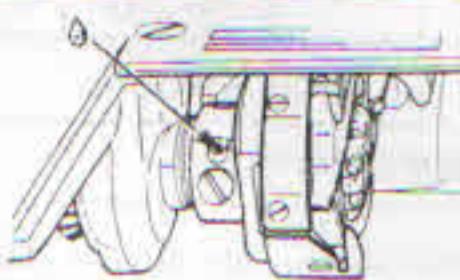

图Fig1

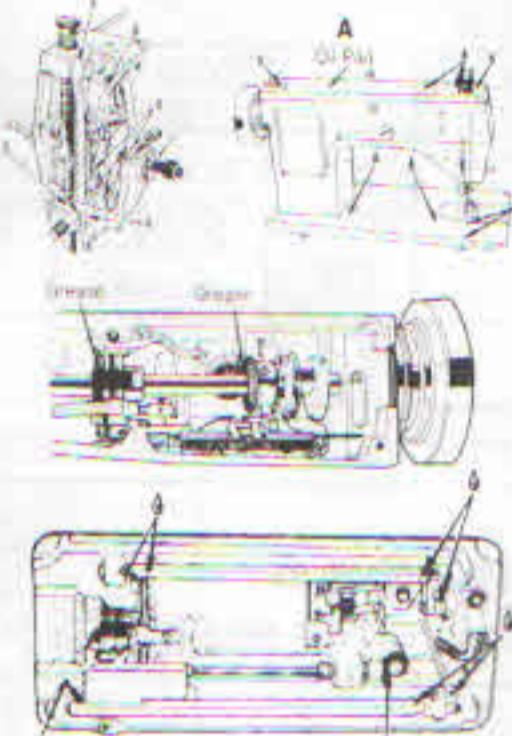

图Fig.2

1. 盘动上轮至加油孔“ $\Delta$ ”，加1-2滴油；

2. 对标油“ $\Delta$ ”符号处，均加1-2滴油；

3. 对齿轮轮齿上“B处”加少量油；

4. 对机头上盖标有“A”处充分加油至饱和；

5. 建议使用2号缝纫机油或HT-T机械油做润滑油。

1). Rotate the upper wheel to the oil hole “ $\Delta$ ”, add one or two drops of oil.

2). The sign “ $\Delta$ ” is expected to add one or two drops of oil.

3). Add a little oil to the sign “B” on the gear.

4). Add enough oil at the sign “A” on the upper cover.

5). The suggested lubrication oil is No.2 sewing machine white oil or HT-T machinery oil.

## 五、针线的选用

### 5. SELECTION OF NEEDLE AND THREAD

根据不同缝料，应选用相应合适的机针及缝线，推荐参阅表1：

表 1

适用类型	薄料	中厚料	厚料
最粗针线	120	60	30
机针大于 (1/100mm)	#10	#12-#16 (80-100)	#18-#19 (110-120)
机针类型	1910-05(135x9)		
可用其他类型相当的针线			

Select the appropriate thread and needle according to the different sewing material as following:

Applicable kind of material	Thin	Medium heavy material	Heavy material
Max size of thread	120	60	30
Needle size (1/100mm)	#10	#12-#16 (80-100)	#18-#19 (110-120)
Needle type	1910-05(135x9)		
Other equal suitable size thread usable.			

## 六、机针的安装(图3)

### 6. INSERTING OF NEEDL(Fig.3)

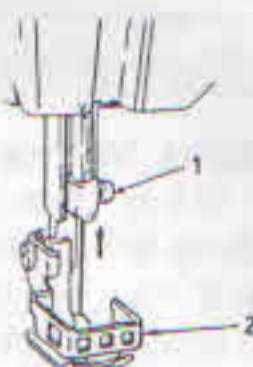


图 Fig.3

盘动上轮使针杆上升到最高位置，松开机针紧固螺钉1，将机针柄插到底，长槽面向操作者，然后，拧紧紧固螺钉1。

Turning the hand wheel and raise the needle bar to the highest position, then loose the needle rightening screw 1. Insert the needle in the needle bar and push it up as far as it will go.

Make sure its long groove faces toward the front. Tighten needle set screw 1 securely.

## 七、换梭心套(图4、5)

### 7.REPLACING BOBBIN CASE (Fig.4,5)

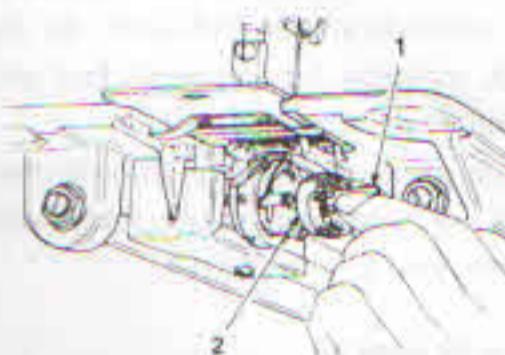


图 Fig.4

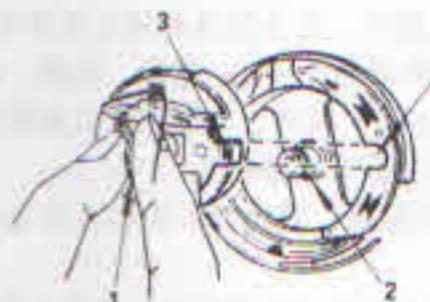


图 Fig.5

抬起梭门盖1，即可取出梭心套2。

装上梭心套时，要求先拉开梭门盖1，将梭心套插入梭床芯轴2上，使梭心套梭门3与梭床定位槽4相扣合，然后放下梭门盖，紧压在梭床上，再合上推板。

Raise latch 1, then pick out the bobbin case 2.

Open bed slide 1 and lay the case on the case shaft 2; while the case hook 3 fit location channel 4, then down the bed slide and press the case and push the plate.

## 八、绕旋心线

### 8. THREAD THE BOBBIN CASE

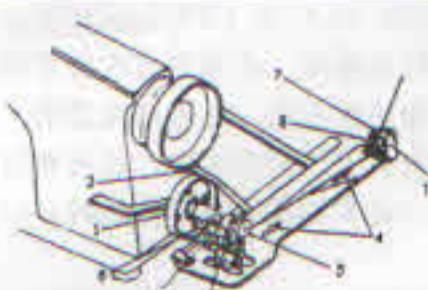


图 Fig.6

### (1) 20U23/23D

1. 将梭心装入绕线器的绕线芯轴，推下线量调节板9即可绕梭心线；
2. 梭心线松紧度可通过拧紧、松夹线螺母8来实现
3. 梭心线左右均匀度可通过移动小过线座10来实现。

1). Put the shuttle core into the winding shaft, push the thread adjustment plate 9, and wind the shuttle thread.

2). Adjust the screw 8, to change the tension of the winding thread.

3). Move the pre-tension 10 to adjust the thread evenness of the bobbin case.

### (2) 20U33/43/53/63

1. 左手抓住上轮，右手将离合螺钉①朝A方向转动松开。

2. 将梭心套入绕线器轴②，尽可能地按下，预调上夹线⑥的张力，上夹线螺母朝+方向转动时，张力将增大，朝-方向转动时，张力将减小。

3. 按箭头C方向推上绕线量调节压板③，然后启动机器绕线，梭心将按B方向旋转。欲调节梭心上的绕线量，先旋松调节压板螺钉④，向操作者方向转动调节压板，绕线量将减少。反之，绕线量将增加。调整后，旋紧调节压板螺钉。

4. 如果绕线不均匀，旋松螺钉⑤，上下移动上夹线⑥使绕线均匀，然后旋紧螺钉⑤。

1) Stop motion of needle by loosening stop-motion screw (1). Hold hand wheel with left hand and turn stop-motion screw toward you with right hand.

2) Place bobbin on bobbin winder spindle (3), pushing it on as far as it will go.

Pre-tension (4)

+.....More tension.

-.....Less tension.

3) Push latch (2) in the direction indicated by arrow (A), then start the machine.

Bobbin winder spindle (3) rotates in the direction indicated by arrow(B).

To adjust the amount of thread on bobbin, loosen screw (4) on latch (2) and swing the latch (2) away from you or toward you, as required.

4) For more thread on bobbin, swing latch (2) away from you.

For less thread on bobbin, swing latch (2)

toward you, if thread winds unevenly on bobbin, loosen screw (5) and move pre-tension (6) up or down, as required, and tighten screw (5).

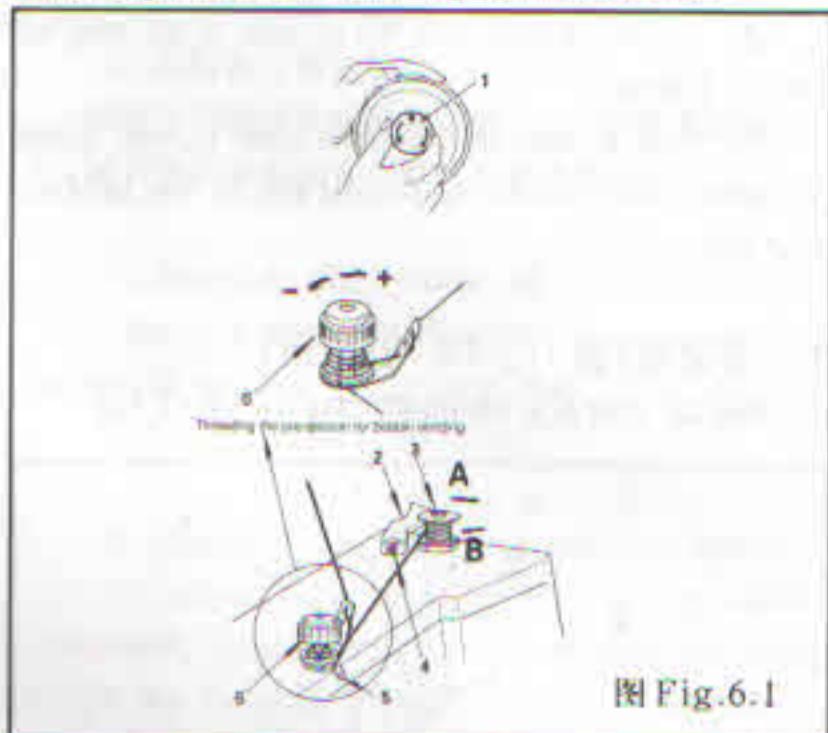


图 Fig.6.1

### 九、梭心的安装(图 7、8、9、10)

### 9. THE INSTALLATION OF THE BOBBIN (Fig.7,8,9,10)

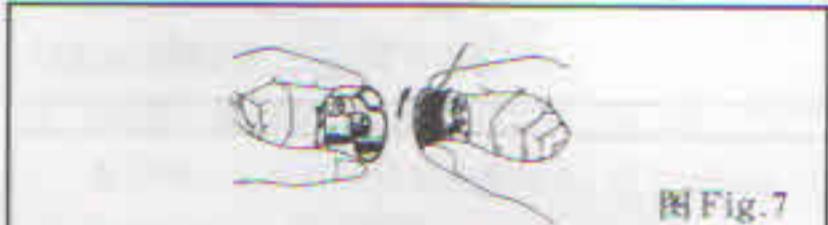


图 Fig. 7



图 Fig. 8



图 Fig. 9

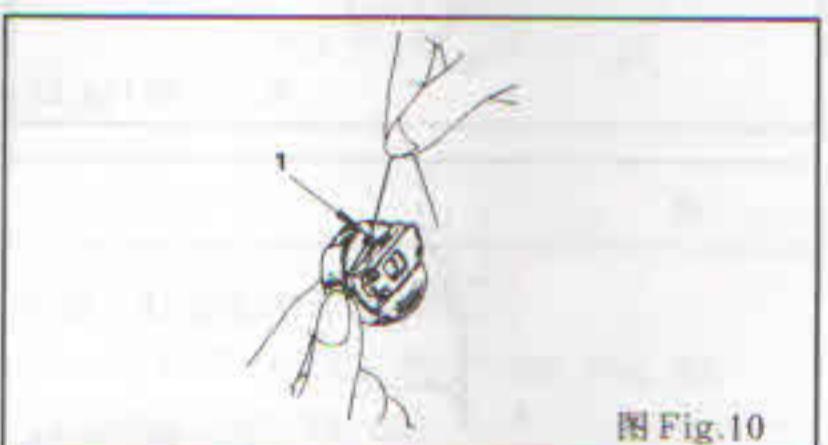


图 Fig. 10

1. 梭心装入梭心套(图7)，将线从长槽2及梭皮1拉出(图8)

2. 将线拉出梭皮末端和孔2(图9)

3. 把线穿过过线孔1,留出60毫米长的线头(图10)。

1). Put the bobbin into bobbin case. Pull thread into notch 1 and draw it under tension spring 2.(Fig.7)

2). Draw thread out from slot 2 on end of spring 1.(Fig.9)

3). Pass it through bobbin case thread guise 1, allow about 60mm of thread out of the bobbin. (Fig.10)

## 十、穿面线(图11、12、13、14)

### 10. THREAD SURFACE STITCHES (Fig.11,12,13,14)

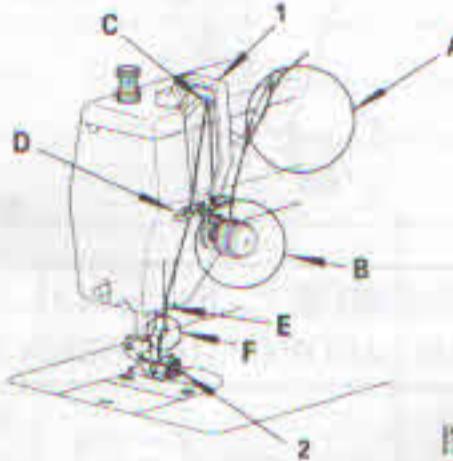


图 Fig.11



图 Fig.12

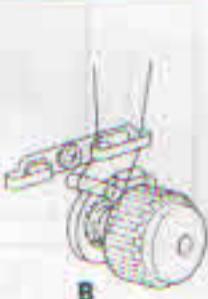


图 Fig.13



图 Fig.14

1. 针杆调到最高位置，然后从线架上引出线头，依次穿过A、B、C、D、E和F。

2. 如图14由前向后穿线。

3. 引出长100毫米左右的线头。

1). Raise needle bar to the highest position, then pull the thread out and through A,B,C,D,E and F.

2). As Fig.14, thread form forward to back.

3). Pull about 100mm of thread out.

## 十一、线迹长度的调节(图15)

### 11. ADJUSTING STITCH LENGTH (Fig.15)

(1) 直线缝线迹长度(即针距)调节

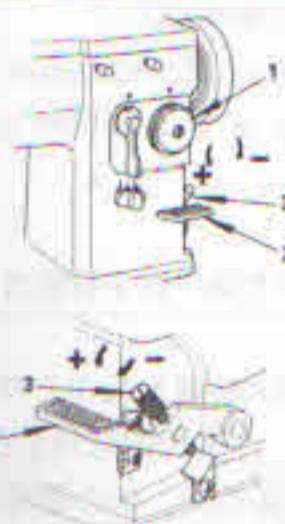


图 Fig.15

按顺时针或逆时针方向旋转针距旋钮1。

+.....针距变长；

-.....针距变短。

(2)倒顺送料的调节

当倒顺扳手2处于自由状态时，机器处于顺进料的状态。

当按下倒顺扳手2，机器处于倒送料状态。

按顺时针或逆时针方向旋转止旋螺钉3，可调节倒送料的针距长度。

+.....针距变长；

-.....针距变短。

Regulating the stitch length

To regulate the stitch length, turn feed regulating dial 1 toward left right as required,

+.....to lengthen

-.....to shorten

Changing the reverse feed

Push lever 2, release for forward feed and down for reverse feed.

To regulate the reverse stitch length, turn thumb screw 3 toward left or right as required.

+.....to lengthen

-.....to shorten

## 十二、压脚压力的调节(见图16)

### 12. ADJUSTING PRESSER FOOT PRESSURE (Fig.16)

顺时针旋转调压螺钉1, 压力增大。

逆时针旋转调压螺钉1, 压力减小。

To regulate the presser foot pressure, turn pressure regulating screw 1, toward left to strengthen or right to reduce pressure.

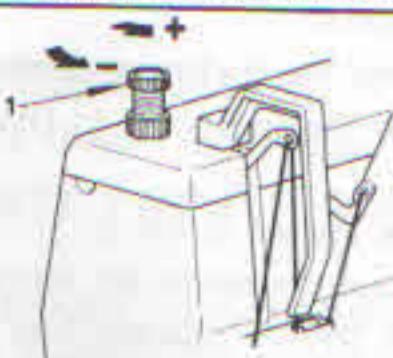


图 Fig.16

## 十三、面线张力的调节(图17)

### 13. ADJUSTING NEEDLE THREAD TENSION (Fig.17)

顺时针旋转夹线螺母1, 张力增大。

逆时针旋转夹线螺母1, 张力减小。

+.....张力增大

-.....张力减小

Regulate needle thread tension with tension regulating knob 1, toward left to strengthen or right to reduce pressure.

+.....more tension

-.....less tension

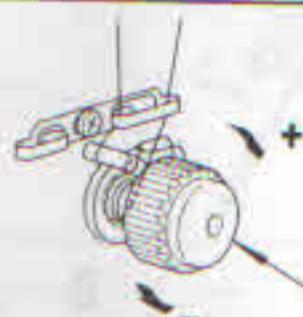


图 Fig.17

## 十四、挑线簧张力及行程的调节(图18)

### 14. REGULATE THE LENGTH AND TENSION OF TAKE-UP SPRING (Fig.18)

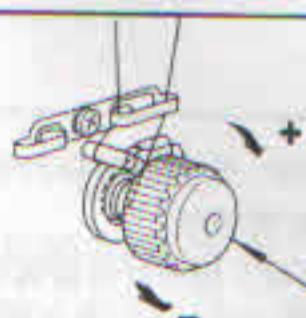


图 Fig.18

## 1. 挑线簧张力的调节

用螺丝刀旋松夹线器紧定螺钉2, 调节挑线簧的张力

+.....张力增大

-.....张力减小

## 2. 挑线簧行程的调节

用螺丝刀旋松夹线器紧定螺钉2, 旋转夹线器组件

3. 调节挑线簧的位置合适, 再坚固螺钉2。

### 1). Regulate the tension of take-up spring

Using a screwdriver in slot to regulate take-up spring tension by turning stud (1) as required.

+.....more tension

-.....less tension

### 2). Regulate the length of take-up spring

To adjust the amount of take-up spring movement, loosen screw 2 and set take-up spring height by turning the entire tendon assembly 3 toward left or right. Then securely tighten screw 2.

## 十五、底线张力的调节(图19)

### 15. ADJUST BOBBIN THREAD TENSION (Fig.19)

松开螺钉2, 旋转底线梭皮螺钉1, 调节底线张力

+.....张力增大

-.....张力减小

Regulate bobbin thread tension regulating screw 1.

+.....more tension

-.....less tension

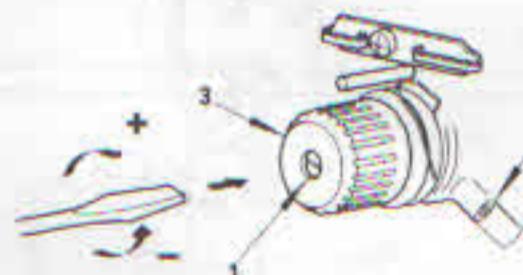


图 Fig.19

## 十六、针位的调节(图20)

### 16. ADJUST NEEDLE POSITION (Fig.20)

(20U33/43/53/63)

此类机器机针左、中、右位置的调节法, 直缝与曲折缝均相同。只要将左、中、右定位于手柄移至想要的位置, 即可缝出相应的线迹。

注意: 机针下有缝料时, 不可调整针位。

Left, Center and Right needle position settings are available for placement of both straight and zigzag stitching.(Fig20)

To position, push lever in and move to desired setting.

Do not make any needle position adjustment while the needle is in the fabric.

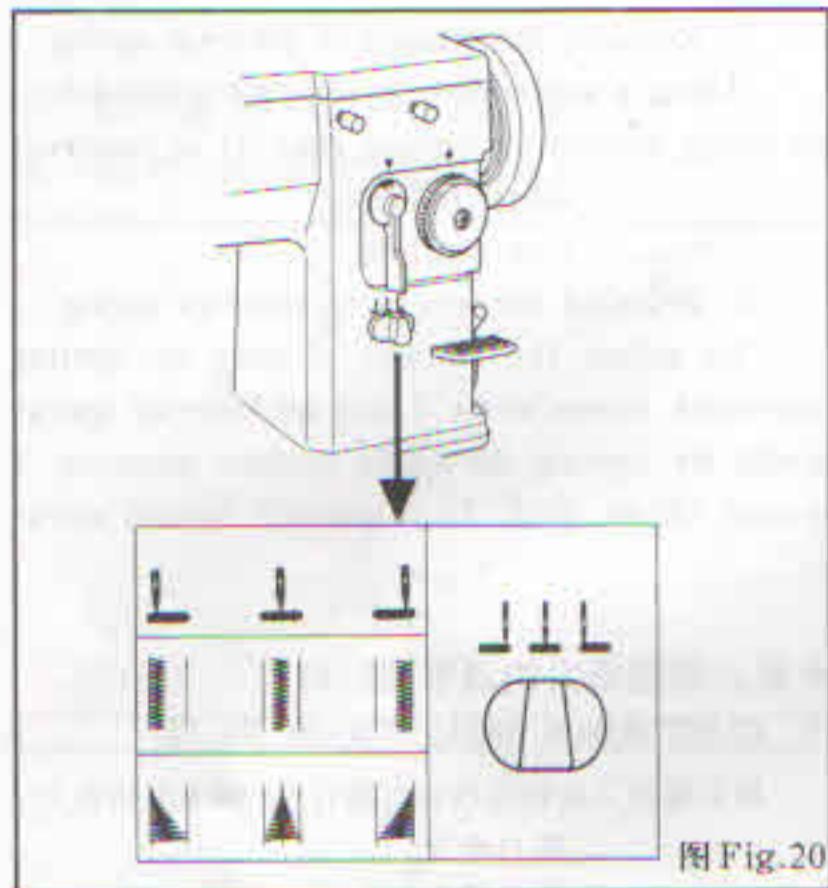


图 Fig.20

### 十七、横针距(即摆针宽度)的调节 (图 21)

17. THE ADJUSTMENT OF HORIZONTAL DISTANCE (Fig.21)

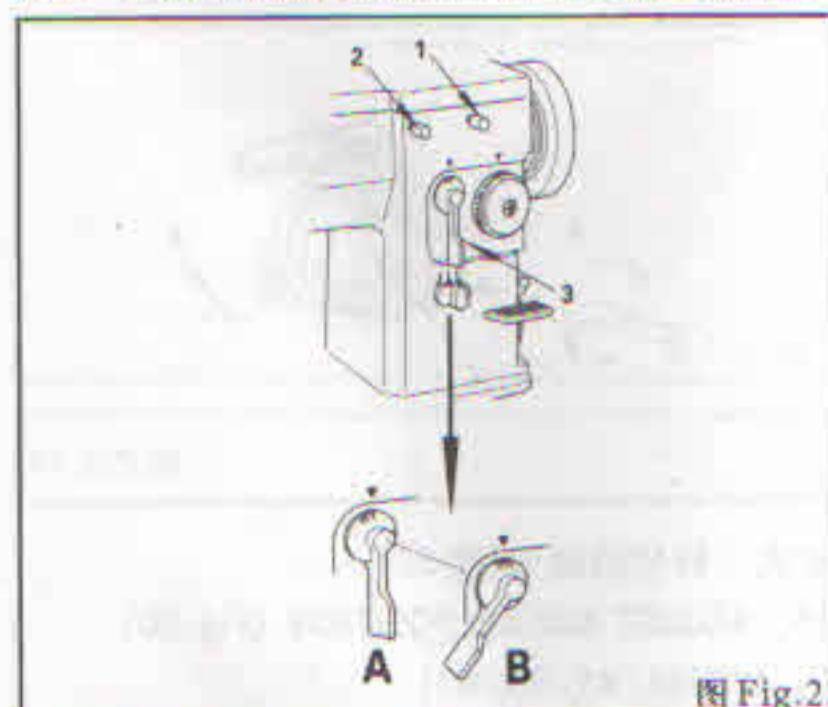


图 Fig.21

当需要调出曲折缝的横针距某一定值时，可按下面方法进行：

(1)松开摆针扳手定位螺钉 2；

(2)将横针扳手 3 板至 0 位 (即 A 位置)；

(3)锁紧摆针定位螺钉 2；

(4)松开摆针定位螺钉 1；

(5)顺时针旋动横杆扳手 3 至 B 位置；

(6)再锁紧摆针定位螺钉 1。

If one fixed value between the min-max of curvilinear stitch is needed, the adjustment can be made as follows:

- 1). Release the horizontal needle set screw 2;
- 2). Turn the spanner 3 to Oposition (i.e. A position);
- 3). Lock the set screw 2;
- 4). Release the needle set screw 1;
- 5). Turn left the spanner 3 to B position;
- 6). Then lock the set screw 1.

### 十八、直缝的可靠锁紧(图 22)

18. LOCKING UNIT FOR LINEAR STITCHING (Fig.22)

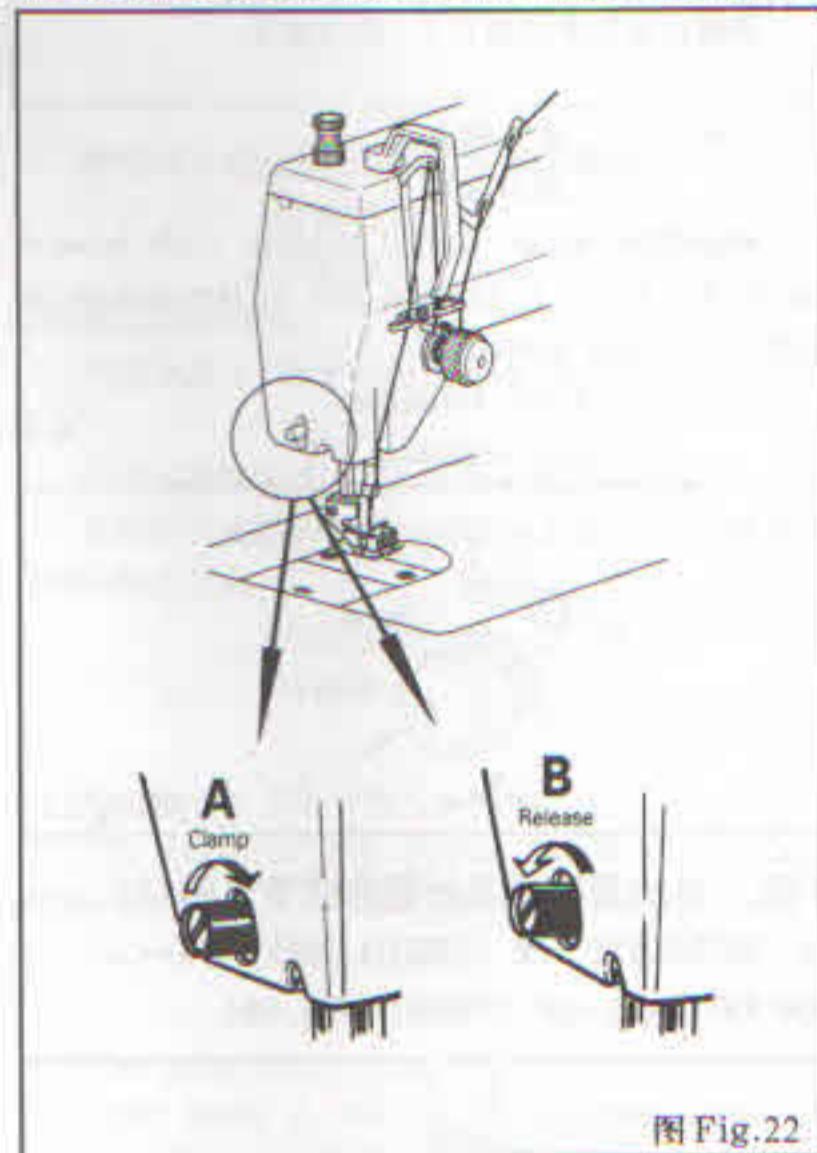


图 Fig.22

当要作直缝时，应顺时针旋转直缝锁紧偏心套“A”向，锁紧针杆摆动架；

当要用曲折缝时，应逆时针旋转直缝锁紧偏心套“B”向，使其锁紧在机壳上，确保针杆摆动架松开。

When linear stitch, turn the linear to "A" direction and locking eccentric sleeve clockwise and secure the needle-bar swaying rack.

When the curvilinear stitching made, the eccentric sleeve should be turned counter-clockwise to "B" direction and locked securely onto the machine housing, the release the swaying rack of the needle bar.

## 十九、皮带罩的安装(图 23、24)

### 19. ASSEMBLAGE OF BELT COVER (Fig.23,24)

台板上: 使手轮 V 形皮带和皮带护罩成一直线, 然后拧紧螺钉。

台板下: 安装皮带罩后电机轮和皮带要旋转自如。  
注意: 图 23 适用于 20U33/43/143/457A/457B/457C  
图 24 适用于 20U53/53A/53B/63/53-5。

On the table: while the V type belt is line with belt cover, tighten the screw.

Under the table: after the assemblage of belt cover, the wheel and belt should rotate freely.

Remarks: Fig.23 is suitable for 20U33/43/143/457A/457B/457C.

Fig.24 is suitable for 20U53/53A/53B/63/53-5.



图 Fig.23

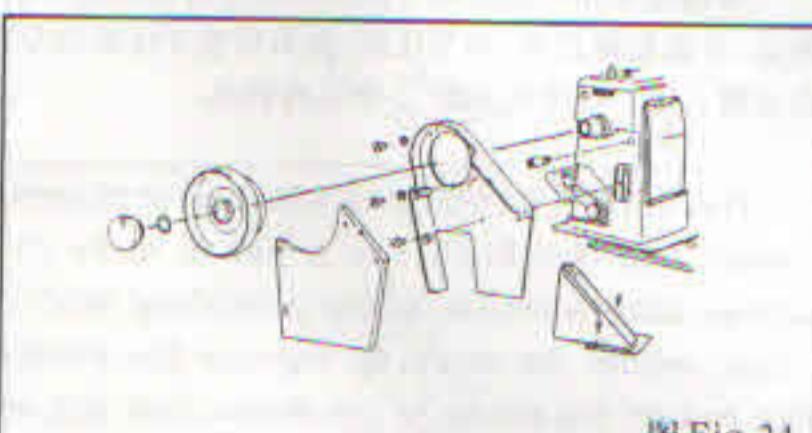


图 Fig.24

## 二十、膝控部件的安装(图 25、26、27)

### 20. MUNT KNEE LIFTER (Fig.25, 26, 27)

(1) 20U23/23D/33/43/143,457A/B/C/D 系列型膝控部件的安装。

①膝碰块 1 的位置应根据操作者的情况进行调节, 以保证操作方便。

②调节件 2 的位置, 当件 2 控制件 3 运动时, 则膝部可以控制机针的摆动; 当件 2 控制件 4 时, 则膝部可以控制压脚的提升。

(1) 20U23/23D/33/43/143,457A/B/C/D

1). To assure the convenience of operation, adjust the knee lifter knee plate.

2). In the position of No.2, while the No.2 control the No.3, knee can control the sway of needle. While the No.2 control the No.4, knee can control the lift of press foot.

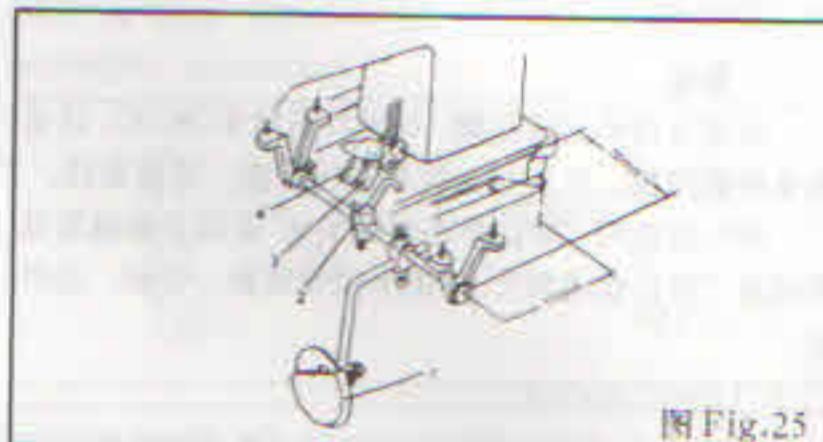


图 Fig.25

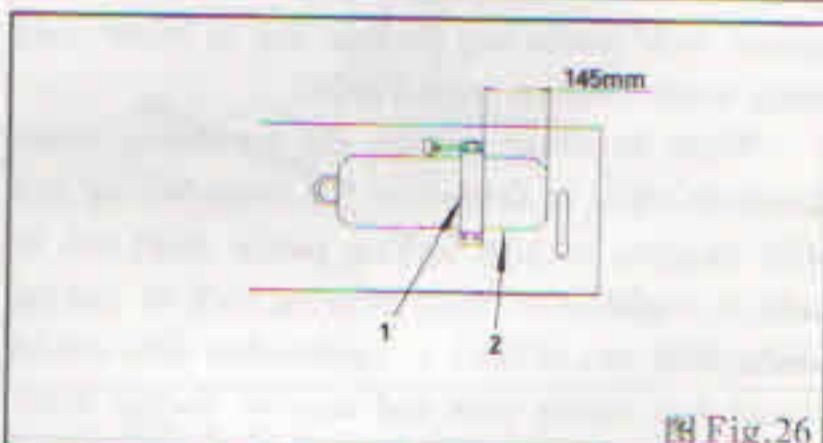


图 Fig.26

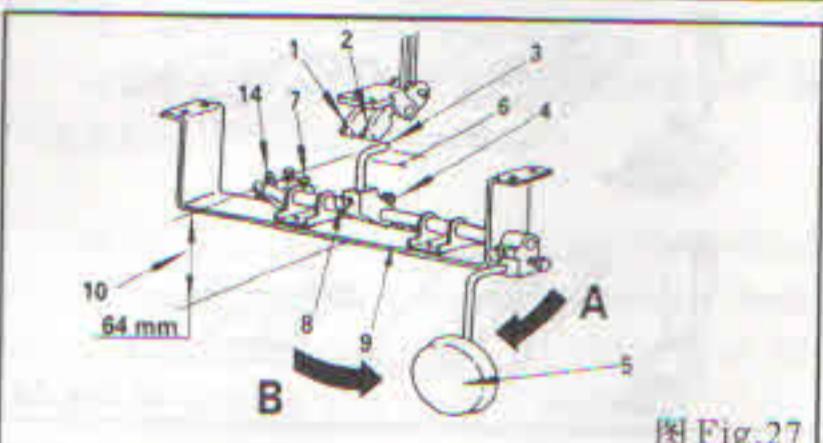


图 Fig.27

(2) 20U53/53A/53B/63/53-5 系列型膝控部件的安装

①把膝提前托架 1 固定在台板 2 下距台板缺口 145mm 处(图 25)。

②当调节到按图 26 所示, 膝控压脚升降。

③当调节到控图 27 所示, 膝控横针距。

(2) 20U53/53A/53B/63/53-5

1). Fix the knee lifter stand to the underside of the table 145mm away from the table channel. (Fig.25)

2). While turn to figure 26 shows, Knee controls the presser to lift or down.

3). While turn to figure 27 shows, Knee controls the stitch width.

## 二十一、几种缝纫方法和附件的使用

### 20. MODES OF SEVERAL SEWING STITCH AND APPLICATION OF ACCESSORY

(20U33/43/53/63)

#### 1. 直缝

采用专用的直缝压脚，针板与送料牙(图28)，比采用多功能压脚，针板与送料牙进行直缝，效果更佳。

进行直缝时，横针距必须调至0，采用直缝锁紧装置锁紧“针杆摆动架”，并换上专用压脚，针板、送料牙。

#### 1. Linear sewing

In case of linear sewing, using the linear sewing presser foot, needle and feeding dog is better than using multi-function ones.(Fig.28)

While do linear sewing, the horizontal width should be adjust to 0 position, the linear locking unit with swaying rack of locking needle shaft can be used in combination with swaying rack of locking needle shaft can be used in combination with special presser foot, needle plate and material feeding tooth.

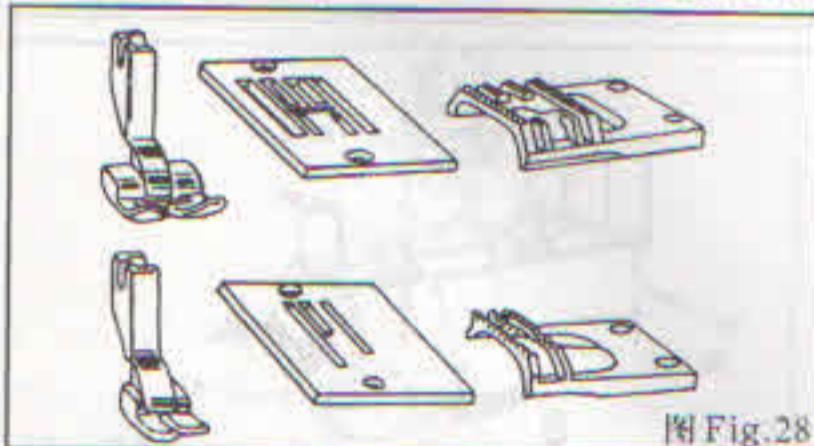


图 Fig.28

#### 2. 刺绣

#### 2. Embroidery

① 必须使横针距在最小-最大之间任意调节，把直针距调至0位，并调整膝控部件(图27)，使膝部控制机针的摆动。

② 卸下压脚，针板和送料牙，换上绣花板。

③ 用左手捏紧而线线头，用于朝自己方向转动上轮，使底线从针板孔中拉出。

④ 确保内外绷架将缝料绷紧，否则会引起跳针，断线及缝料皱缩。(图29)

#### Preparation before embroidery

1). It should be noted that any free regulation can be made at the horizontal needle distance between min-max, set the vertical needle distance to 0 position and will adjust the knee-control parts to make the component control the movement of the sway of needle.(Fig.27)

2). Discharge the presser foot and needle plate and feeding dog, then change if with embroidering plate.

3). Hold firmly the end of the surface stitches with your left hand, turn the out from the holes of the needle plate.

4). To make sure to stretch tightly the material between the internal and external embroidery frames, otherwise, maybe cause skipping and stitches breaking or material creased.(Fig.29)

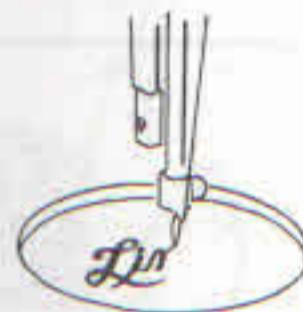


图 Fig.29

#### 3. 拉链缝

#### 3. ZIPPERED SEWING

该缝法采用拉链压脚(图30)，使于针迹接近突出的边，并旋松螺钉B，调节压脚，使机针位于压脚的左，右边槽A处，可适用于图31中几种情况。

This mode is preferable to make use of zippered presser foot (see Fig.32) in a bid to make the stitches more accessible to the projectiong stitches, then release the screw B, regulate the presser foot and set the needle to the presser foot and set the needle to left and right grooves A of the presser foot. The mode is expected to suit for the following sewing.(Fig.30)

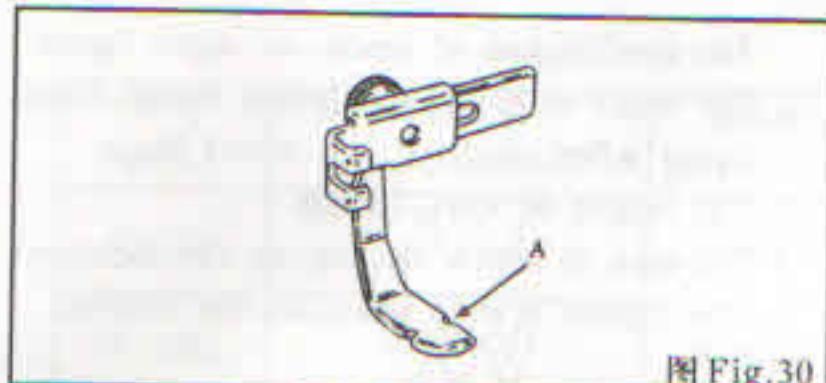


图 Fig.30

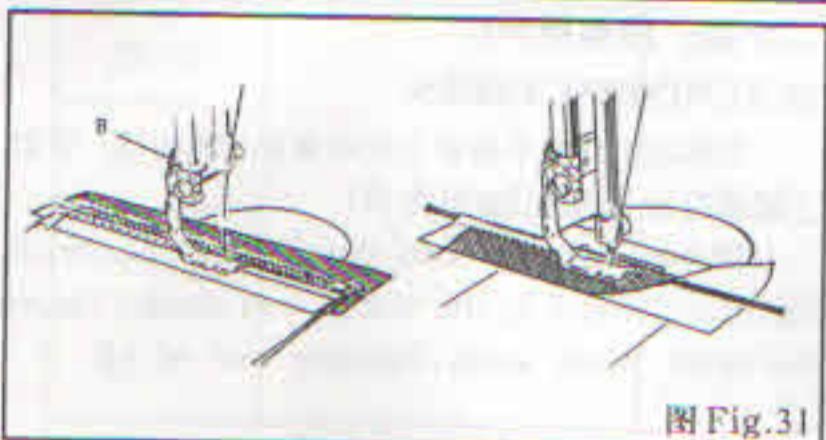


图 Fig.31

#### 4. 卷边缝

#### 4. HEM-WRAPPING MODE

卷边缝采用卷边压脚(图32)

拆掉多功能压脚，换上卷边压脚，采用直缝法，针位选择中间，就可以进行图33的卷边缝。

In this mode, the hem-wrapping presser foot can be used as we wish (fig.32)

Remove the multi-functional presser foot and replace it with the hem-wrapping one. This is also a mode of linear sewing with the needle set to the central position; the hem-wrapping operation can be effected.(Fig.33)



图 Fig.32

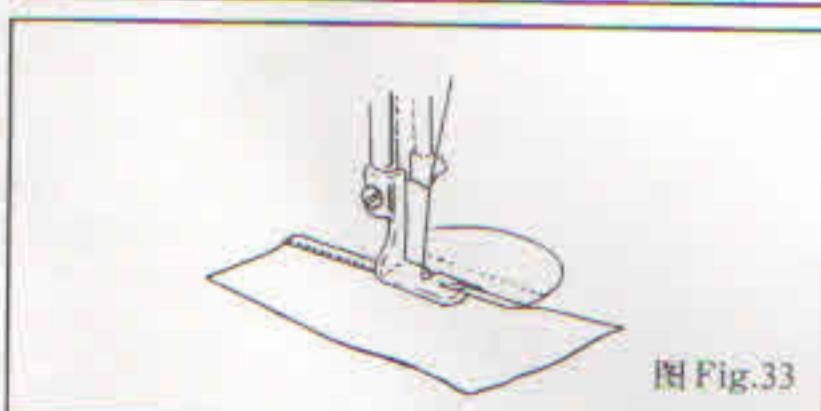


图 Fig.33

#### 5. 包梗缝

#### 5. STEM-WRAPPING MODE

进行包梗缝时，要换上专用的包梗压脚、针板、送料牙(图34)，针位选择中间、横针距调节至3mm之内，把一条较粗的线绳穿过包梗压脚的水槽A，就可以进行包梗缝(图35)。

During the sewing with the stem-wrapping mode, the special stem-wrapping presser foot, needle plate and material feeding tooth should be put into use (fig.34), the needle is set to the central position and the horizontal needle distance set to 3mm, and then run the rougher thread through the small groove A on the stem-wrapping presser foot so that the sewing of this mode will be smoothly conducted.

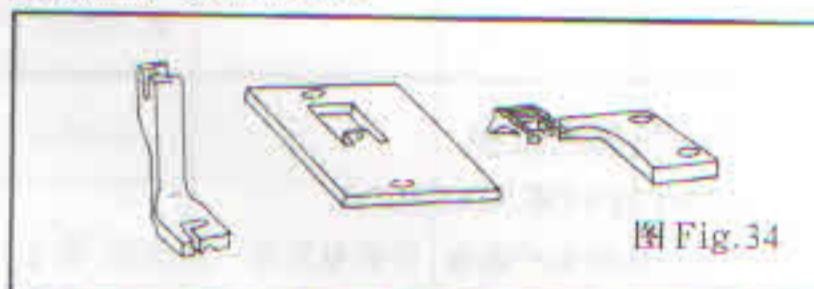


图 Fig.34

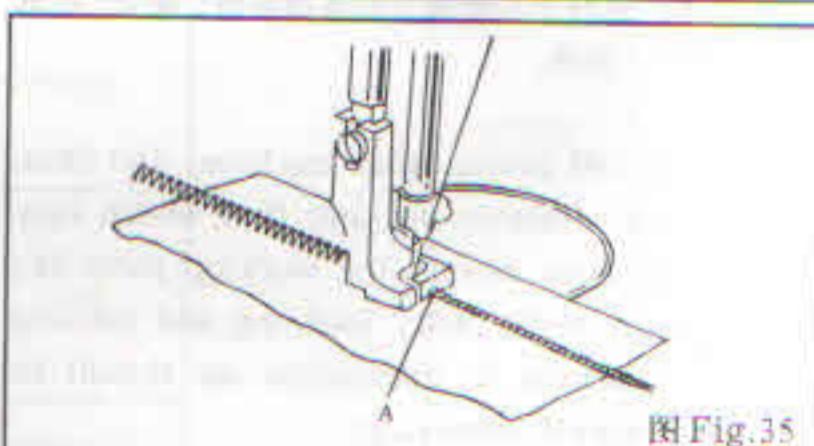


图 Fig.35

#### 6. 装饰缝(图36)

#### 6. DECORATION SEWING(Fig. 36)

只要变换左、中、右的针位及熟练控制横针距，就可缝出如图36的图案。

If the left, central and right needle positions can be freely changeable and the horizontal needle distance skillfully controlled, the patterns of the decoration sewing will be well achieved.



图 Fig.36

### 7. 其他一些实用缝法(图 37)

### 7. OTHER MODES OF PRACTICAL SEWING (Fig.37)

The machine should be cleaned periodically to remove lint and fluff, which may have accumulated around the working parts. A machine in continuous use should be oiled frequently.

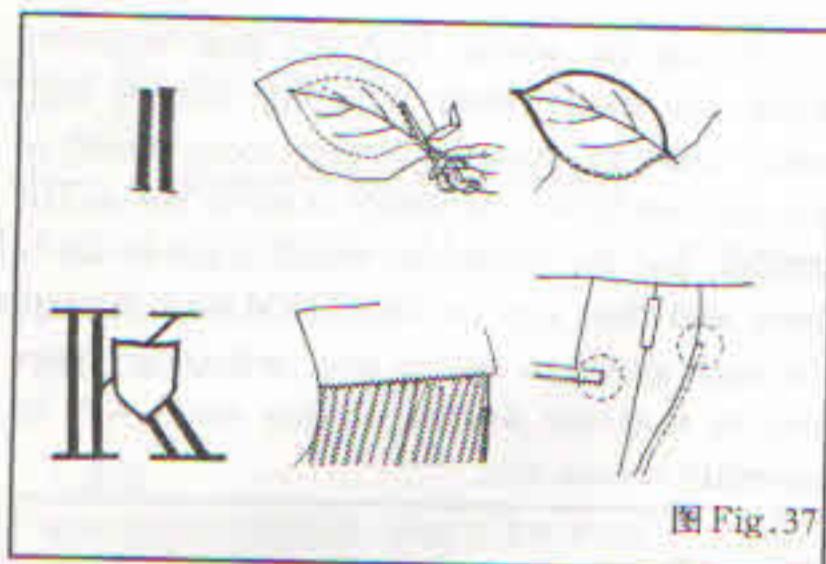


图 Fig.37

## 二十二、机器的维护

### 22. MAINTAIN OF MACHINE

请爱护你的生产设备，务必每天尽一次清理，除去压脚、针板、送料牙和旋梭上的多余缝屑、灰尘，经常给机器清洁、润滑。

You should protect your machine, and clean it every day. Remove lint and fluff which may have accumulated around the working parts like presser foot, needle plate, feed dog and rotating hook. A machine in continuous use should be oiled and cleaned frequently.

## 二十三、主要技术规格

### 23. MAIN SPECIFICATION

针迹类型：见附录

机器种类：见附录

机针规格：见表 1

手提压脚提升高度：6.35mm

上轮：V型带轮 74mm

工作空间宽度：211mm(20U143;289mm)

工作空间高度：130mm

最大针距：见附录

最高缝制速度：见附录

The mode of stitches; see the enclosed

The mode of machine; see the enclosed

The specification of needle; see upper figure

The height of hand lifter presser foot; 6.35mm

Upper wheel; model V belt wheel 74mm

The height of work; 130mm

The max of needle distance; see the enclosed

The highest sewing speed; see the enclosed

## 二十四、提醒用户：

### 24. REMINDING USERS:

如你在工作中不需要上轮有离合功能的话，请把上轮螺钉旋上固定。(备用件 14)


If you have no need the function of clutch for upper wheel in the work, you should fasten the upper wheel screw, (storndy part of 14)

表一 ENCLOSED FIGURE

种类 Model	针迹类型 Stitch modes	最高缝速 Max.of speed	最大横针距 Max.horizontal needle distance	最长线迹长度 Length of stitches	膝控压脚 提升高度 Height of lifter	备注 Addition
20U23		2000 针 / 分 2000.r.p.m	12mm 6mm			
20U23D					12mm	双针距 2.5、3.5、4.5 (可换) 选购: Double needle width 2.5, 3.5, 4.5 (changeable)
20U33		2200 针 / 分 2200.r.p.m	8mm			
20U43		2000 针 / 分 2000.r.p.m	12mm			
20U53		2500 针 / 分 2500.r.p.m	9mm			
20U63		2000 针 / 分 2000.r.p.m	12mm		9mm	
20U53A		2500 针 / 分 2500.r.p.m	4mm 4.5mm	5mm		
20U53B						
20U143		2000 针 / 分 2000.r.p.m	12mm			
457A		2000 针 / 分 2000.r.p.m		8mm		
457B					12mm	
457C		1500 针 / 分 1500.r.p.m		6mm		
457D		2000 针 / 分 2000.r.p.m				双针距 2.5、3.5、4.5 (可换) 选购: Double needle width 2.5, 3.5, 4.5 (changeable)
20U53-5		2500 针 / 分 2500.r.p.m	5mm		9mm	

## 机壳组件

### COMPONENTS OF HOUSING

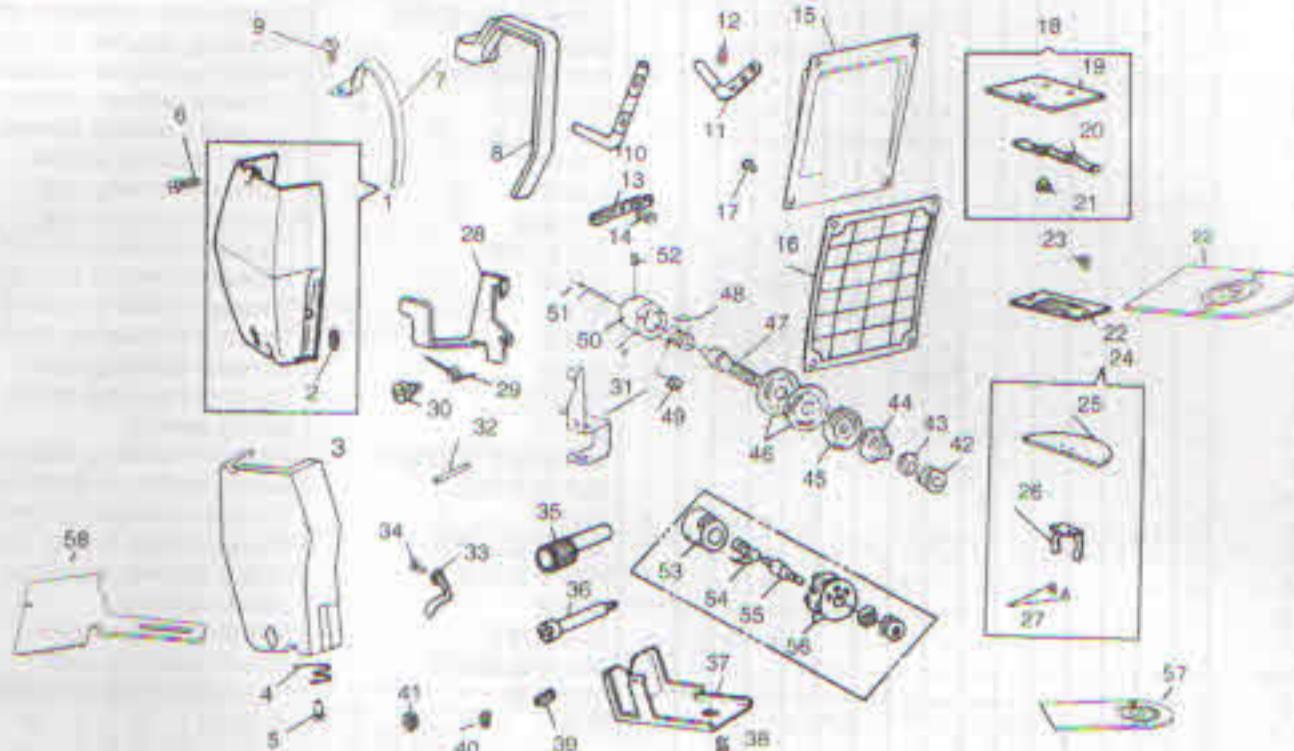


序号 NO	件 号 PART NO.	数 量 QTY	名 称 DESCRIPTION
1	GR245/3-8	1	面板组件 Panel components
	GR406/3-8	1	面板组件 Panel components
2	GR232-8	1	面板线勾 Panel thread hook
3	GK158-8	1	面板 Panel
4	GW242-8	1	面板线勾 Panel thread hook
5	GZ374-8	1	面板线勾钉 Panel thread hook needle
6	GS132-8	1	面板螺钉 Panel screw
7	GS375-8	2	面板螺钉 Panel screw
	GK134-8	1	挑线杆防护罩 Stitch-staff shield
	GK146-8	1	挑线杆防护罩 Stitch-staff shield
	GK140-8	1	挑线杆防护罩 Stitch-staff shield
8	GK161-8	1	挑线杆防护罩 Stitch-staff shield
9	GS223-8	1	挑线杆防护罩螺钉 Stitch-staff shield screw
	GS379-8	1	挑线杆防护罩螺钉 Stitch-staff shield screw
10	GR412-8	1	双孔过线架 Double hole thread-running rack
11	GR233-8	1	三眼线勾 3-eyelet hole thread hook
	GR364-8	1	二眼线勾 2-eyelet hole thread hook
12	GS139-8	1	三眼线勾螺钉 3-eyelet hole thread hook screw
13	GR231-8	1	双过线架 Thread-running rack
14	GS223-8	1	双过线架螺钉 Thread-running rack screw
15	GK133-8	1	后盖板 Back cover
	GK145-8	1	后盖板 Back cover
16	GK160-8	1	后盖板 Back cover
17	GS132-8	1	后盖板螺钉 Back cover screw
18	GR476/4-8	1	推板组件 Pushing plate components
19	GM132-8	1	推板 Pushing plate
20	GW131-8	1	推板簧 Pushing plate spring
21	GS133-8	2	推板簧螺钉 Pushing plate spring screw
22	GM131-8	1	针板 Needle plate
	GM156-8	1	针板 Needle plate
	GM205-8	1	针板 Needle plate
	GM203-8	1	针板 Needle plate
23	GS338-8	2	针板螺钉 Needle plate screw
24	GR477/4-8	1	针板内盖板组件 Inner cover plate components
25	GM130-8	1	针板内盖板 Inner cover plate
26	GW130-8	1	针板内盖板簧 Inner cover plate spring
27	GS255-8	2	针板内盖板螺钉 Inner cover plate screw
28	GR241-8	1	松线杠杆 Thread-releasing lever
29	GR373-8	1	松线杠杆 Thread-releasing lever
	GW135-8	1	松线杠杆扭簧 Thread-releasing lever spring
30	GS148-8	1	松线杠杆螺钉 Thread-releasing lever screw
31	GR397-8	1	据线定位座 Locating base of presser
32	GX180-8	1	下过线钉 Lower thread-running hook
33	GR230-8	1	下过线勾 Lower thread-running hook
34	GS137-8	1	下过线勾螺钉 Lower thread-running screw

序号 NO	件号 PART NO.	20J241	20J240	20J33	20J43	20J53	20J53A	20J53B	20J53C	20J63	20J143	457A	457B	457C	457D	数量 QTY	名 称 DESCRIPTION
35	GT150-8	*	*	*	*	*	*	*	*	*	*	1	直缝锁紧偏心套	Linear lock eccentric shield			
	GT159-8	*	*	*	*	*	*	*	*	*	*	1	直缝锁紧偏心套	Linear lock eccentric shield			
36	GS284-8	*	*	*	*	*	*	*	*	*	*	1	直缝锁紧偏心套螺钉	Linear lock eccentric shield screw			
37	GK130-8	*	*	*	*	*	*	*	*	*	*	1	旋转防护罩	Rotating shuttle shield			
38	GS132-8	*	*	*	*	*	*	*	*	*	*	1	旋转防护罩螺钉	Rotating shuttle shield screw			
39	GX191-8	*	*	*	*	*	*	*	*	*	*	1	偏心套顶柱	Eccentric shield stress ploe			
40	GW179-8	*	*	*	*	*	*	*	*	*	*	1	偏心套压簧	Eccentric shield stress spring			
41	GS288-8	*	*	*	*	*	*	*	*	*	*	1	压簧螺钉	Stress spring screw			
42	GL130-8	*	*	*	*	*	*	*	*	*	*	1	夹线螺母	Thread-holding nut			
	GL176-8	*	*	*	*	*	*	*	*	*	*	1	夹线螺母	Thread-holding nut			
43	GR239-8	*	*	*	*	*	*	*	*	*	*	1	夹线制动板	Thread-holding brake			
44	GW133-8	*	*	*	*	*	*	*	*	*	*	1	夹线簧	Thread-holding spring			
	GW208-8	*	*	*	*	*	*	*	*	*	*	1	夹线簧	Thread-holding spring			
45	GR238-8	*	*	*	*	*	*	*	*	*	*	1	松线板	Thread-releasing plate			
46	GR237-8	*	*	*	*	*	*	*	*	*	*	2	夹线板	Thread-holding plate			
47	GS145-8	*	*	*	*	*	*	*	*	*	*	1	夹线螺钉	Thread-holding screw			
48	GW134-8	*	*	*	*	*	*	*	*	*	*	1	挑线簧	Stitch spring			
49	GS146-8	*	*	*	*	*	*	*	*	*	*	1	夹线器螺钉紧固螺钉	Thread-holding fixing screw			
50	GR372-8	*	*	*	*	*	*	*	*	*	*	1	挑线簧调节座	Stitch-spring adjusting base			
51	GX132-8	*	*	*	*	*	*	*	*	*	*	1	松线钉	Thread-releasing needle			
52	GS147-8	*	*	*	*	*	*	*	*	*	*	1	夹线器紧定螺钉	Thread-hold fixing screw			
53	GR370-8	*	*	*	*	*	*	*	*	*	*	1	挑线簧调节座	Stitch spring adjuster			
54	GW170-8	*	*	*	*	*	*	*	*	*	*	1	挑线簧	Stitch spring			
55	GS261-8	*	*	*	*	*	*	*	*	*	*	1	挑线簧螺钉	Stitch spring screw			
56	GR367/3-8	*	*	*	*	*	*	*	*	*	*	2	挑线导线器部件	Stitch-guiding part			
57	GM220-8	*	*	*	*	*	*	*	*	*	*	1	圆形针板	Rounded Needle plate			
58	GR1320-8	*	*	*	*	*	*	*	*	*	*	1	垫板	Spacer			

## 绕线器、上盖组件


### BOBBIN WINDER UPPER COVER COMPONENTS

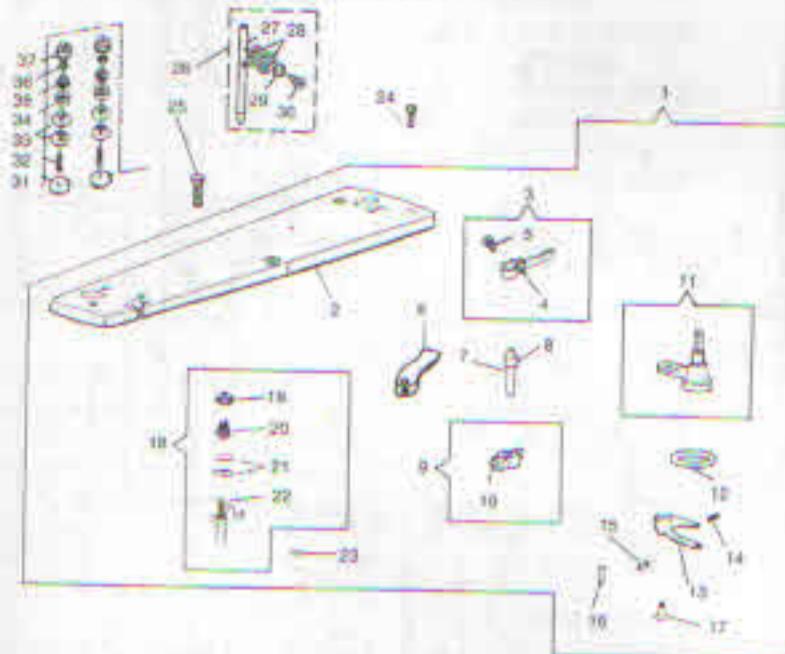

序号 NO.	件号 PART NO.	20143 201280 20039 20143 20153 20153A 20153B 20153C 20153D 201141 A57A A57B A57C A57D	数量 QTY	名 称 DESCRIPTION
1	GR483/27-B GR781/28-B	- - - - - - - - - -	1	上盖组件 Upper cover components
2	GK132-B GK141-B GK148-B GK159-B GK147-B	- -	1	上盖组件 Upper cover components
3	GR480/2-B	- - - - -	1	上盖 Upper cover
4	GR377-B	- - - - -	1	上盖 Upper cover
5	GS273-B	- - - - -	1	上盖 Upper cover
6	GR726-B	- - - - -	1	线量调节压板 Volume adjusting plate
7	GZ202-B	- - - - -	1	线量调节压板 Volume adjusting plate
8	GZ246-B	- - - - -	1	线量调节轴 Volume adjusting spindle
9	GQ218-B	- - - - -	1	线量调节轴 Volume adjusting spindle
10	GR481/2-B	- - - - -	1	线量调节轴挡圈 Washer
11	GS222-B	- - - - -	1	绕线定位块 Locating block
12	GR405/8-B GR780/9-B	- - - - - - - - - -	1	绕线定位块螺钉 Locating block set screw
13	GS207-B	- - - - -	1	绕线芯轴组件 Axis components
14	GO284-B	- - - - -	1	绕线芯轴组件 Axis components
15	GR375-B	- - - - -	1	橡胶圈 Rubber circle
16	GW173-B	- - - - -	1	橡胶圈 Rubber circle
17	GW174-B	- - - - -	1	绕线柄 Thread-winding swaying handle
18	GX182-B	- - - - -	1	绕线柄压簧 Swaying handle presser spring
19	GS272-B	- - - - -	1	绕线柄拉簧 Swaying handle presser spring
20	GX218-B	- - - - -	1	拉簧销钉 Extension spring pin
21	GR482/6-B	- - - - -	1	绕线曲柄螺钉 Crank screw
22	GR778/6-B	- - - - -	1	绕线曲柄螺钉 Crank screw
23	GL162-B	- - - - -	1	上夹线器 Upper thread-running plate
24	GL175-B	- - - - -	1	上夹线器 Upper thread-running plate
25	GR379-B	- - - - -	1	上夹线器 Upper thread-running plate
26	GR403/2-B	- - - - -	2	上夹线器 Upper thread-running pole
27	GS275-B	- - - - -	1	上过线板组件 Upper thread-running plate components
28	GS142-B	- - - - -	1	上夹线螺钉紧固螺钉 Fixing screw
29	GS140-B	- - - - -	1	上盖后螺钉 Upper cover back screw
30	GS376-B	- - - - -	1	上盖螺钉 Upper cover set screw
31	GR234/5-B	- - - - -	2	上盖螺钉 Upper cover screw
32	GR235-B	- - - - -	1	过线器部件 Thread-running components
33	GR365-B	- - - - -	1	过线柱 Thread-running pole
34	GR236-B	- - - - -	2	过线柱 Thread-running pole
35	GW132-B	- - - - -	1	过线夹线板 Thread-running plate
36	GS141-B	- - - - -	1	过线夹线簧 Thread-running spring
37	GL160-B	- - - - -	1	过线夹线螺钉 Thread-running holding screw
38	GS260-B	- - - - -	2	夹线螺母 Thread-holding nut
39	GR237-B	- - - - -	2	夹线螺钉 Thread-holding screw
40	GR369-B	- - - - -	4	夹线板 Thread-holding plate
41	GW133-B	- - - - -	2	夹线簧座 Thread-holding spring
42	GR239-B	- - - - -	2	夹线簧 Thread-holding spring
43	GL160-B	- - - - -	2	夹线制动板 Thread-holding brake
44		- - - - -	2	夹线螺母 Thread-holding nut

## 挑线刺布组件

## STITCH-EMBROIDERY COMPONENTS

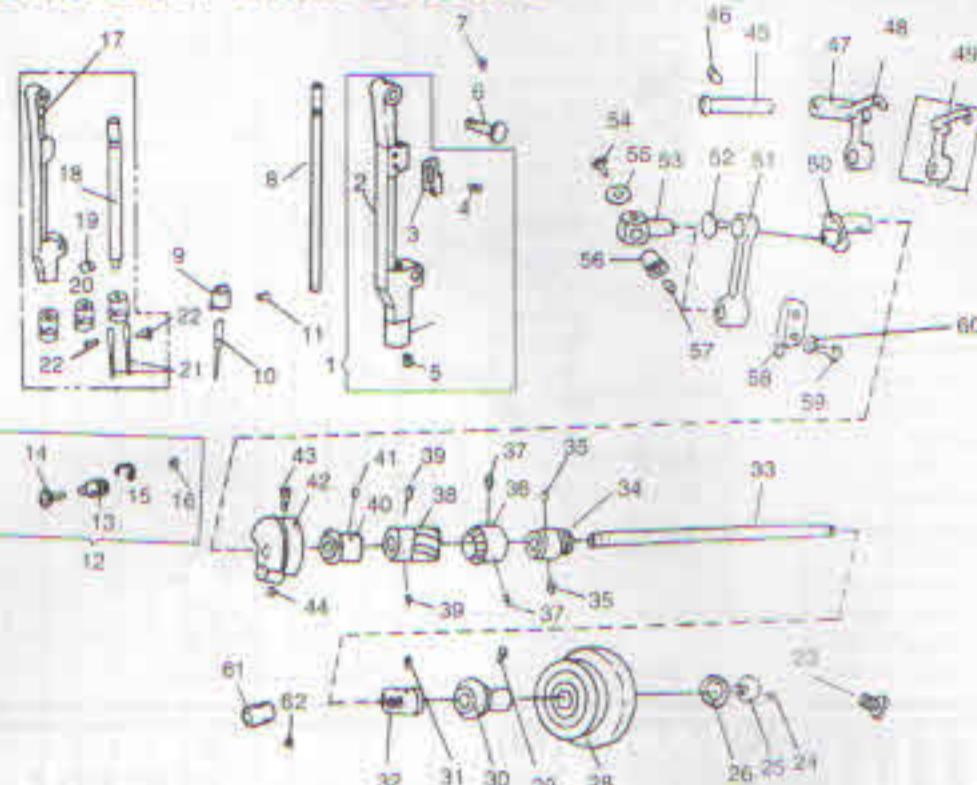


序号 NO.	件号 PART NO.	数 OTY	称 DESCRIPTION
1	GR485/5-8	1	针杆摆动架组件 Swaying rack of needle staff components
2	GR251-8	1	针杆摆动架 Swaying rack of needle staff
3	GR255-8	1	针杆定位片 Locating plate of needle staff
4	GS163-8	2	针杆定位片螺钉 Locating plate screw
5	GS158-8	1	针杆偏心销螺钉 Eccentric pin screw of needle staff
6	GX143-8	1	针杆摆动架销 Pin of swaying rack
7	GS154-8	1	针杆摆动架销螺钉 Pin of swaying rack screw
8	GZ223-8	1	针杆 Needle bar
9	GZ140-8	1	针杆 Needle bar
10	GR252-8	1	针杆线勾 Thread-hook of needle staff
11	GV130-8	1	机针 Needle
12	GS159-8	1	机针紧定螺钉 Locking screw of needle
13	GR484/4-8	1	针夹组件 Needle clamp components
14	GR467-8	1	针夹 Needle clamp
15	GS290-8	1	线勾螺钉 Thread-hook screw
16	GR466-8	1	针杆线勾 Thread-hook of needle staff
17	GS289-8	1	机针紧定螺钉 Needle lock screw
18	GR361-8	1	针杆摆动架 Needle bar swaying rack
19	GZ200-8	1	双针针杆 Double needle needle bar
20	GS202-8	1	双针针头紧定螺钉 Double needle clammer lock screw
21	GR360-8	1	双针针头A(选购) Double needle clammer A
22	GR360B-8	1	双针针头B(选购) Double needle clammer B
23	GR360C-8	1	双针针头C(选购) Double needle clammer C
24	GV130-8	2	机针 Needle
25	GS262-8	2	机针紧定螺钉 Needle lock screw
26	GS254-8	1	上轮吊紧螺钉 Clamping screw of upper wheel
27	GS279-8	1	离合小螺钉 Clutch little screw
28	GP151-8	1	离合手轮 Clutch wheel
29	GR380-8	1	离合垫圈 Clutch washer
30	GP142-8	1	上轮 Upper wheel
31	GP130-8	1	上轮 Upper wheel
32	GS280-8	1	上轮套螺钉 Sleeve screw
33	GO209-8	1	上轮套筒 Sleeve of upper wheel
34	GS277-8	1	上轴后轴套螺钉 Back sleeve of upper shaft
35	GS173-8	1	上轴后轴套紧定螺钉 Fastening screw of back sleeve
36	GO208-8	1	上轴后轴套 Back sleeve of upper shaft
37	GO144-8	1	上轴后轴套 Back sleeve of upper shaft
38	GZ141-8	1	上轴 Upper shaft
39	GZ207-8	1	上轴 Upper shaft
40	GZ203-8	1	上轴 Upper shaft
41	GZ248-8	1	上轴 Upper shaft
42	GT153-8	1	送布凸轮 Cam of cloth-feeding
43	GS251-8	2	送布凸轮螺钉 Cam of cloth-feeding screw
44	GC131-8	1	上轴弧齿锥齿轮 Arc-cone gear (upper shaft)
45	GS167-8	2	上轴弧齿锥齿轮螺钉 Screw or arc-cone gear

序号 NO	件 号 PART NO	20U228	20U230	20U33	20U43	20U43	20U534	20U538	20U539	20U539	20U143	457A	457B	457C	467D	数量 QTY	名 称 DESCRIPTION
38	GC130-B	*	*	*	*	*	*	*	*	*	*	1	上轮螺旋齿轮	Spiral of gear of upper shaft			
	GC148-B	-	-	-	-	-	-	-	-	-	-	1	螺旋齿轮	Spiral of gear of upper shaft			
39	GS170-B	*	*	*	*	*	*	*	*	*	*	1	上轮螺旋齿轮螺钉	Screw of spiral gear			
40	GO143-B	*	*	*	*	*	*	*	*	*	*	1	上轴前轴套	Front sleeve of upper shaft			
41	GS169-B	*	*	*	*	*	*	*	*	*	*	1	上轴前轴套紧定螺钉	Fastening screw of front sleeve			
42	GH145-B	*	*	*	*	*	*	*	*	*	*	1	挑线曲柄	Stitch crank			
43	GS168-B	*	*	*	*	*	*	*	*	*	*	1	挑线曲柄螺钉	Stitch crank screw			
44	GS404-B	*	*	*	*	*	*	*	*	*	*	2	针杆曲柄紧固螺钉	Crank fastening screw			
45	GX144-B	*	*	*	*	*	*	*	*	*	*	1	挑线摇杆销	Pin of swaying staff			
46	GS147-B	*	*	*	*	*	*	*	*	*	*	1	挑线摇杆销螺钉	Screw of swaying staff			
47	GH141-B	*	*	*	*	*	*	*	*	*	*	1	挑线摇杆	Stitch-swaying staff			
48	GH143-B	*	*	*	*	*	*	*	*	*	*	1	挑线杆	Stitch-staff			
49	GH200-B	-	-	-	-	-	-	-	-	-	-	1	挑线杆	Stitch-staff			
50	GH144-B	*	*	*	*	*	*	*	*	*	*	1	针杆曲柄	Crank of needle staff			
51	GH140-B	*	*	*	*	*	*	*	*	*	*	1	小连杆	Small connecting staff			
52	GS166-B	*	*	*	*	*	*	*	*	*	*	1	倒牙螺钉	Toothed screw			
53	GR253-B	*	*	*	*	*	*	*	*	*	*	1	针杆连接轴体	Connecting shaft			
54	GS161-B	*	*	*	*	*	*	*	*	*	*	1	针杆连接销轴螺钉	Pin-screw of needle			
55	GO141-B	*	*	*	*	*	*	*	*	*	*	1	针杆连接轴销垫圈	Pin-washer of connecting shaft			
56	GZ142-B	*	*	*	*	*	*	*	*	*	*	1	针杆连接轴销	Pin of connecting shaft			
57	GS160-B	*	*	*	*	*	*	*	*	*	*	1	针杆连接轴销紧定螺钉	Pin-locking screw of connecting shaft			
58	GK254-B	*	*	*	*	*	*	*	*	*	*	1	小连杆导板	Guide of small of connecting staff			
59	GS132-B	*	*	*	*	*	*	*	*	*	*	2	小连杆导板螺钉	Screw of guide			
60	GO217-B	*	*	*	*	*	*	*	*	*	*	2	小连杆导板垫圈	Guide washer			
61	GO799-B	*	*	*	*	*	*	*	*	*	*	1	上轴挡圈	Upper Shaft retainer			
62	GS167-B	*	*	*	*	*	*	*	*	*	*	2	上轴挡圈螺钉	Retainer screw of upper shaft			

## 勾线组件


## THREAD-HOOK COMPONENTS

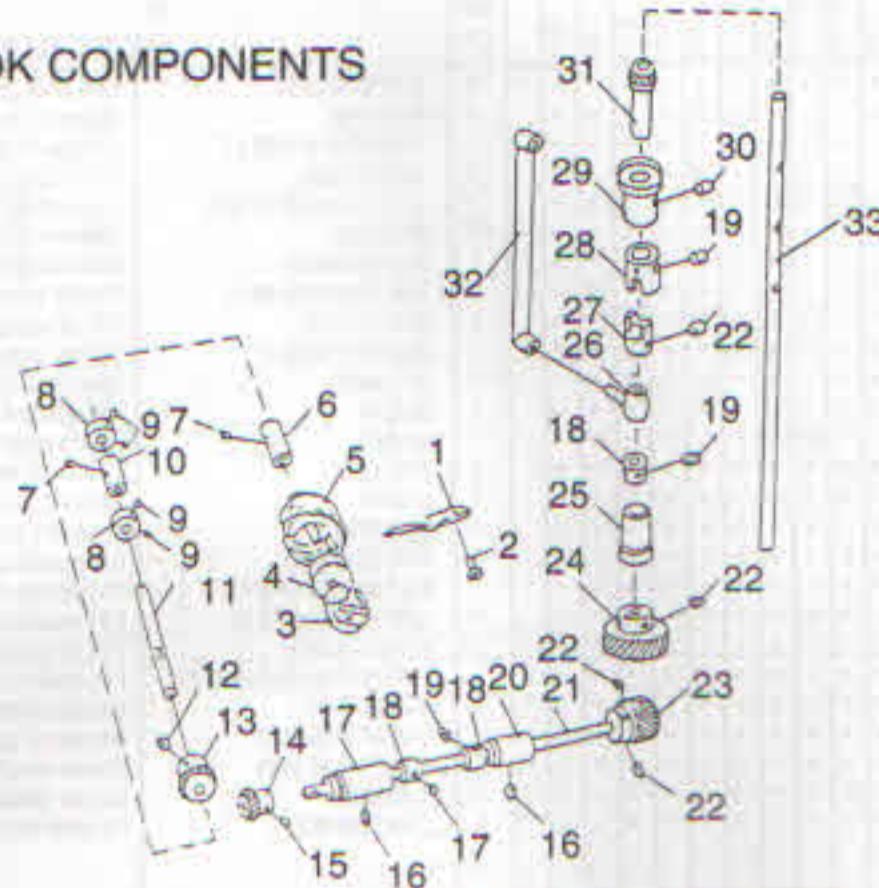

序号 NO.	件号 PART NO.	20120	20020	20038	20149	20053	20050A	20050B	20052	20053	20143	457A	457B	457C	457D	数量 QTY	名 称 DESCRIPTION
1	GR278-B															1	旋梭定位板 Locating plate of rotating shuttle
2	GS256-B															1	旋梭定位板螺钉 Screw of locating plate
3	GM131-B															1	梭子 Shuttle
4	GN135-B															1	梭心 Shuttle core
5	GN130-B															1	旋梭 Rotating shuttle
6	GO163-B															1	旋梭前轴套 Front sleeve of rotating shuttle shaft
7	GS201-B															2	旋梭前轴套螺钉 Screw of front sleeve
8	GO164-B															2	旋梭轴挡圈 Retainer of rotating shuttle shaft
9	GS202-B															4	旋梭轴挡圈螺钉 Retainer screw
10	GO165-B															1	旋梭轴后轴套 Back sleeve of rotating shuttle shaft
11	GZ164-B															1	旋梭轴 Rotating shuttle shaft
12	GS167-B															2	旋梭轴弧齿锥齿轮螺钉 Screw of arc-cone gear
13	GC141-B															1	旋梭轴弧齿锥齿轮 Arc-cone gear of rotating shuttle shaft
14	GC140-B															1	下轴弧齿锥齿轮 Arc-cone gear of lower shaft
15	GS199-B															2	下轴弧齿锥齿轮螺钉 Screw of arc-cone gear
16	GS147-B															2	下轴前后轴套螺钉 Screw
17	GO162-B															1	下轴前轴套 Front sleeve of lower shaft
18	GO216-B															1	下轴前轴套 Front sleeve of lower shaft
19	GO158-B															3	下轴(立轴)挡圈 Lower shaft retainer
20	GS199-B															6	下轴挡圈螺钉 Retainer screw of lower shaft
21	GO161-B															1	下轴后轴套 Back sleeve of lower shaft
22	GO215-B															1	下轴后轴套 Back sleeve of lower shaft
23	GZ163-B															1	下轴 Lower shaft
24	GZ210-B															1	下轴 Lower shaft
25	GS167-B															6	差动齿轮螺钉 Screw of differential gear
26	GC139-B															1	下轴差动齿轮 Differential gear
27	GC137-B															1	立轴差动齿轮 Differential gear
28	GO159-B															1	立轴下轴套 Lower sleeve of vertical shaft
29	GO157-B															1	差动滑套 Differential shaft sliding-cover
30	GO156-B															1	下离合套筒 Lower clutch sleeve
31	GO155-B															1	上离合套筒 Upper clutch sleeve
32	GO154-B															1	立轴上轴套 Upper sleeve of vertical shaft
33	GS198-B															1	立轴上轴套螺钉 Screw of upper sleeve
																1	立轴弧齿锥齿轮 Arc-cone gear
																1	大差动连杆 Differential connecting bar
																1	立轴 Vertical shaft

## 勾线组件


## THREAD-HOOK COMPONENTS

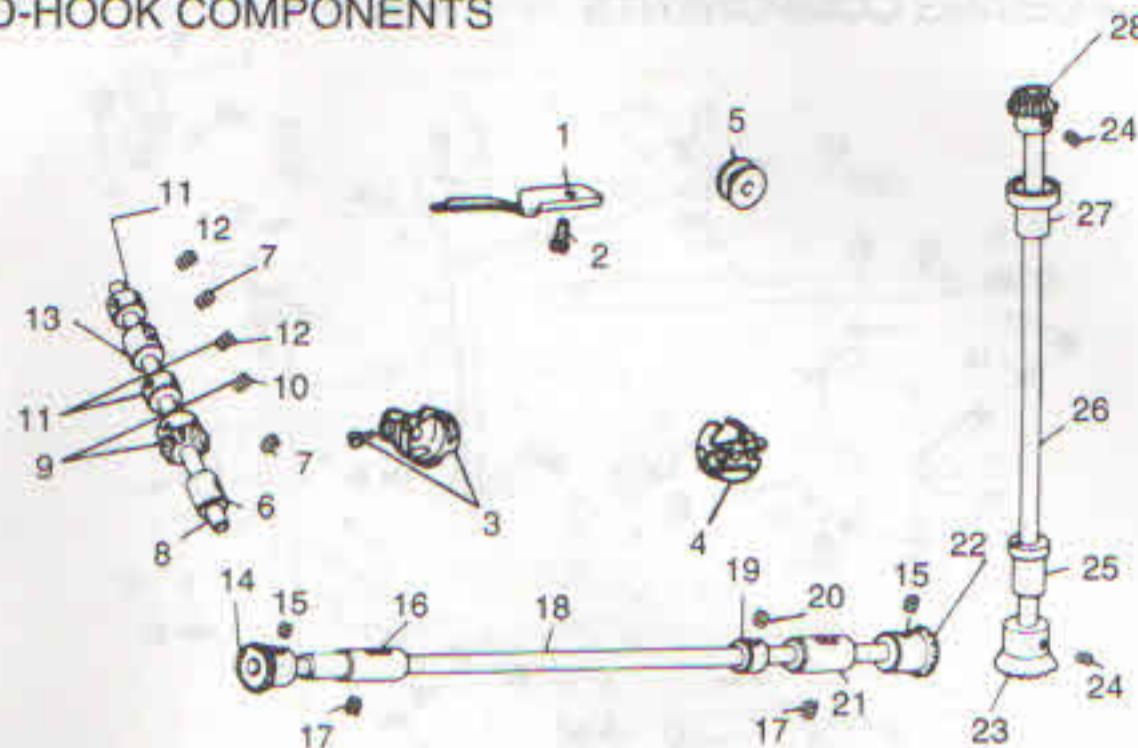

序号 NO	件 号 PART NO	20028	201230	200235	20143	20163	200834	200539	200834	200403	200143	457A	457B	457C	457D	数量 QTY	名 称 DESCRIPTION	
1	GR278-8	-	-	-	-	-	-	-	-	-	-	1	旋转定位板	Locating plate of rotating shuttle				
2	GS256-8	-	-	-	-	-	-	-	-	-	-	1	旋转定位板螺钉	Screw of locating plate				
3	GN130-8	-	-	-	-	-	-	-	-	-	-	1	梭	Shuttle				
4	GN131-8	-	-	-	-	-	-	-	-	-	-	1	梭子	Shuttle core				
5	GN135-8	-	-	-	-	-	-	-	-	-	-	1	梭芯	Rotating shuttle				
6	GO163-8	-	-	-	-	-	-	-	-	-	-	1	旋转轴前轴套	Front sleeve of rotating shuttle shaft				
7	GS201-8	-	-	-	-	-	-	-	-	-	-	2	旋转轴轴套螺钉	Screw of front sleeve				
8	GZ164-8	-	-	-	-	-	-	-	-	-	-	1	旋转轴	Rotating shuttle shaft				
9	GC141-8	-	-	-	-	-	-	-	-	-	-	1	旋转轴弧齿锥齿轮	Screw arc-cone gear				
10	GS167-8	-	-	-	-	-	-	-	-	-	-	2	旋转轴齿锥齿轮螺钉	Arc-cone gear of rotating shuttle shaft				
11	GO164-8	-	-	-	-	-	-	-	-	-	-	2	旋转轴挡圈	Retainer of rotating shuttle shaft				
12	GS202-8	-	-	-	-	-	-	-	-	-	-	4	旋转轴挡圈螺钉	Retainer screw				
13	GO165-8	-	-	-	-	-	-	-	-	-	-	1	旋转轴后轴套	Back sleeve of rotating shuttle shaft				
14	GC140-8	-	-	-	-	-	-	-	-	-	-	1	下轴弧齿锥齿轮(左)	Arco-cone gear of lower shaft(left)				
15	GS199-8	-	-	-	-	-	-	-	-	-	-	4	下轴弧齿锥齿轮螺钉	Screw of lower shaft				
16	GO162-8	-	-	-	-	-	-	-	-	-	-	1	下轴前轴套	Front sleeve of lower shaft				
17	GS147-8	-	-	-	-	-	-	-	-	-	-	2	下轴前后轴套螺钉	Screw of arc-cone gear				
18	GZ225-8	-	-	-	-	-	-	-	-	-	-	1	下轴	Lower shaft				
19	GO232-8	-	-	-	-	-	-	-	-	-	-	1	下轴挡圈	Lower shaft retainer				
20	GS199-8	-	-	-	-	-	-	-	-	-	-	4	下轴挡圈螺钉	Retainer screw of lower shaft				
21	GO231-8	-	-	-	-	-	-	-	-	-	-	1	下轴后轴套	Back sleeve of lower shaft				
22	GC151-8	-	-	-	-	-	-	-	-	-	-	1	下轴弧齿轮锥齿轮(右)	Arco-cone gear of lower shaft(right)				
23	GC152-8	-	-	-	-	-	-	-	-	-	-	1	立轴弧齿锥齿轮(下)	Arco-cone gear of vertical shaft(lower)				
24	GS199-8	-	-	-	-	-	-	-	-	-	-	4	立轴弧齿锥齿轮螺钉	screw of differential gear				
25	GO229-8	-	-	-	-	-	-	-	-	-	-	1	立轴下轴套	Lower sleeve of vertical shaft				
26	GZ224-8	-	-	-	-	-	-	-	-	-	-	1	立轴	Vertical shaft				
27	GO228-8	-	-	-	-	-	-	-	-	-	-	1	立轴上轴套	Upper sleeve of vertical shaft				
28	GC150-8	-	-	-	-	-	-	-	-	-	-	1	立轴弧齿锥齿轮(上)	Arco-cone gear of vertical shaft(upper)				


送料组件

## MATERIAL-FEEDING COMPONENTS

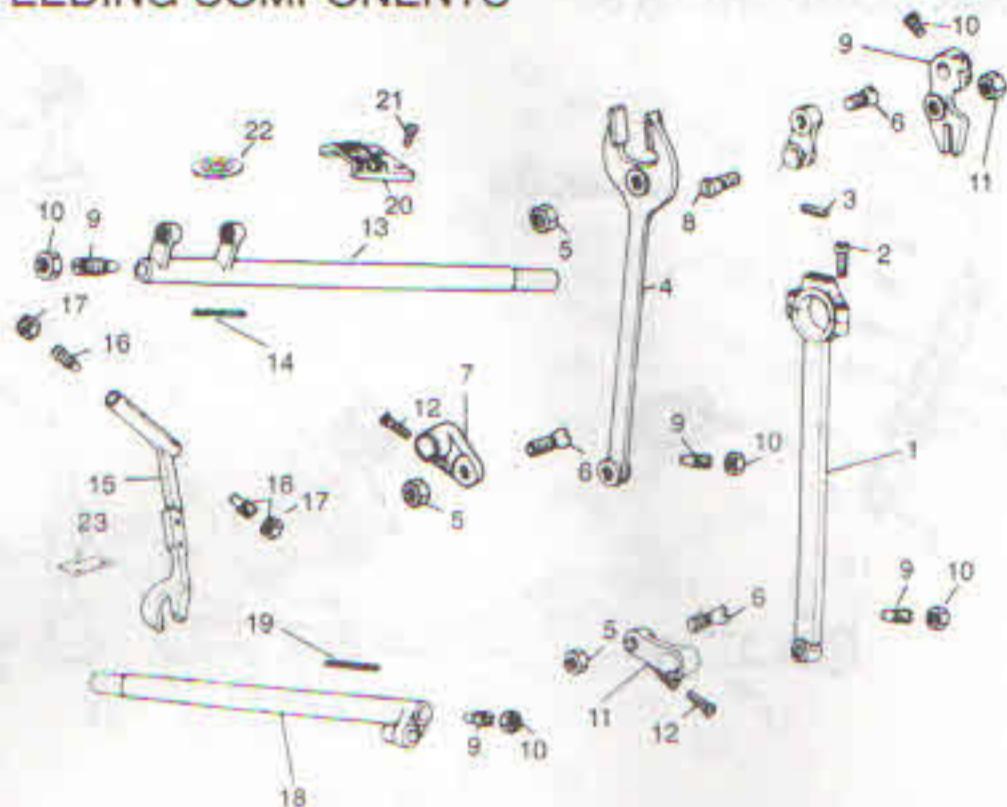

## 差动、油盘组件


### DIFFERENTIAL,OIL COMPONENTS

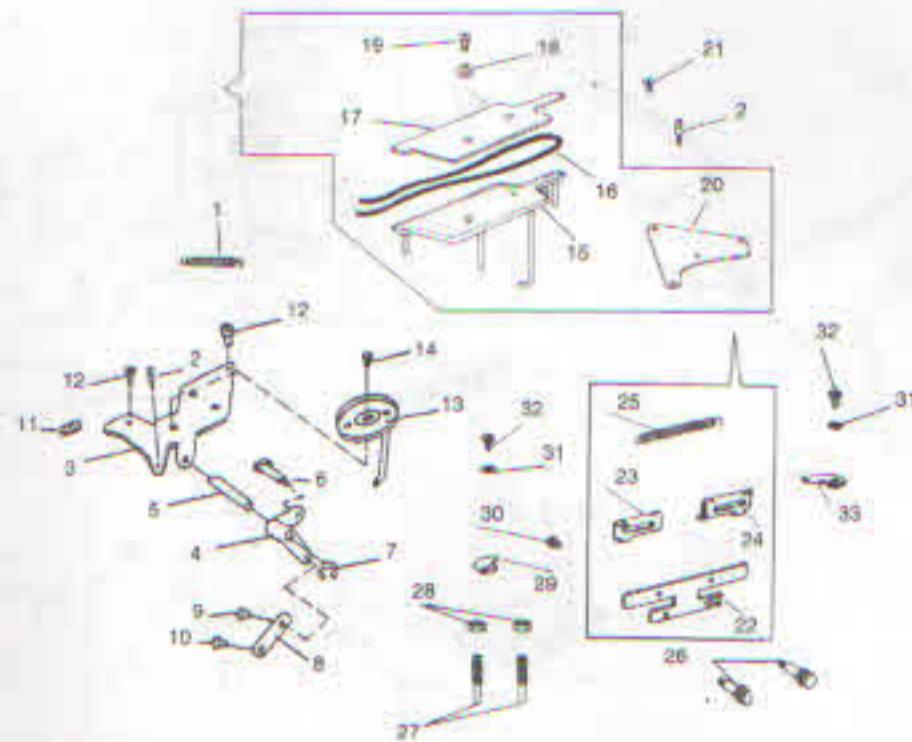

序号 NO.	件 号 PART NO.	数 量 QTY	名 称 DESCRIPTION
1	GW141-8	1	摇针调节曲柄弹簧
2	GS212-8	1	拉簧螺钉
3	GR299/2-8	1	差动曲柄定位架组件
	GR390/2-8	1	差动曲柄定位架组件
4	GH180/3-8	1	差动曲柄组件
	GH210/3-8	1	差动曲柄组件
5	GZ175-8	1	差动连接轴
6	GS219-8	1	差动连杆连接螺钉
7	GO177-8	1	差动连接轴挡圈
8	GH179-8	1	小差动连杆
9	GS216-8	1	差动连杆连接螺钉
10	GS217-8	1	摇针滑块连接螺钉
11	GS213-8	1	差动曲柄定位架轴套支头螺钉
12	GS256-8	2	差动曲柄定位架螺钉
13	GR297-8	1	小油盘
14	GS132-8	1	小油盘螺钉
15	GR382/6-8	1	小油盘
	GR474/6-8	1	小油盘
16	GR388-8	1	油纱带
17	GR388-8	1	油盘毡
18	GO217-8	2	平垫圈
19	GS132-8	2	小油盘螺钉
20	GR469-8	1	小油盘安装板
21	GS256-8	1	小油盘安装板螺钉
22	GR294-8	1	摇针针距定位架
23	GR290-8	1	摇针针距调节架(A)
24	GR291-8	1	摇针针距调节架(B)
25	GW142-8	1	摇针针距定位簧拉簧
26	GS253-8	2	摇针定位螺钉
	GS383-8	2	摇针定位螺钉
27	GS215-8	2	摇针定位块调节螺钉
28	GL153-8	2	摇针定位块调节螺母
29	GR289-8	1	摇针针距左定位块
30	GS213-8	2	摇针针距定位架螺钉
31	GO174-8	2	摇针针距定位块垫圈
32	GS256-8	2	摇针针距定位块螺钉
33	GR295-8	1	摇针针距右定位块
	GR289-8	1	摇针针距右定位块
	GR366-8	1	摇针针距右定位块
	GR1375-8	1	摇针针距右定位块

## 摆针组件


### COMPONENTS OF SWAYING NEEDLE

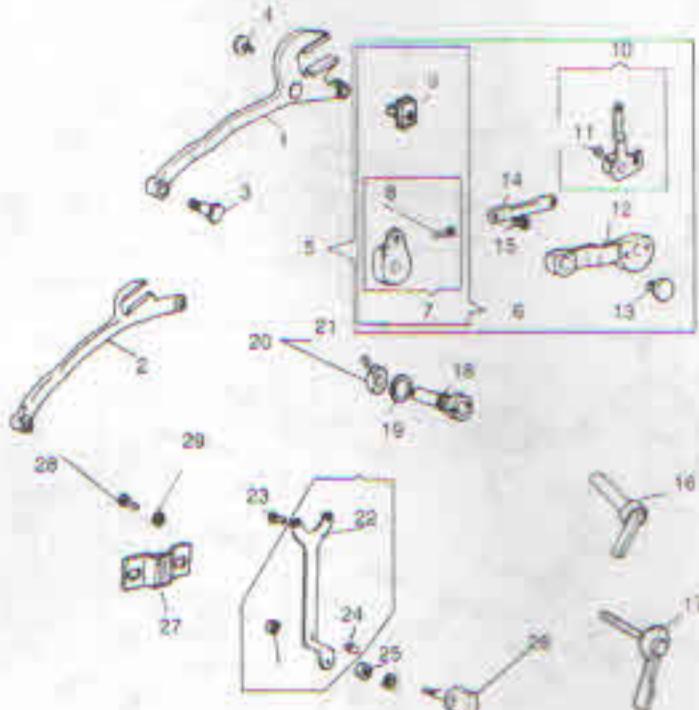

序号 NO.	件号 PART NO.	数 QTY	名称 DESCRIPTION
1	GR288-8	1	横针坡叉
	GR381-8	1	横针坡叉
	GR402-8	1	横针坡叉
2	GR457-8	1	横针坡叉
3	GX155-8	1	横针坡叉
4	GS291-8	1	针杆偏心销
	GS217-8	1	摆针滑块螺钉
5	GR521/12-8	1	摆针滑块螺钉
6	GR519/3-8	1	摆针滑块螺钉
7	GR298-8	1	摆针定位组件
	GR393-8	1	摆针导块座
8	GS185-8	1	摆针导块座螺钉
9	GU140-8	1	摆针滑块
10	GR292/2-8	1	摆针调节曲柄近件
	GR407/2-8	1	摆针调节曲柄组件
11	GS214-8	1	摆针调节曲柄螺钉
12	GR296-8	1	摆针定位块
	GR459-8	1	摆针定位块
13	GX154-8	1	摆针导块连接销
14	GH178-8	1	摆针调节连杆
15	GS216-8	3	差动连杆连接螺钉
16	GR392/2-8	1	摆针扳手组件
17	GR731/2-8	1	摆针扳手组件
18	GO179-8	1	摆针扳手套筒
	GO286-8	1	摆针扳手套筒
19	GO211-8	1	摆针扳手套筒垫圈
20	GO178-8	1	摆针扳手定位组件
21	GR218-8	2	摆针扳手定位组件螺钉
22	GR394-8	1	单边曲折调节架
	GR1427-8	1	单边曲折调节架
23	GS223-8	2	单边曲折调节架螺钉
24	GS261-8	1	单边曲折定位钉
	GS701-8	2	单边曲折定位钉
25	GL163-8	1	单边曲折定位钉螺母
	GR235-8	1	单边曲折定位钉螺母
26	GR411-8	1	单边曲折手柄
	GR729-8	1	单边曲折手柄
27	GR395-8	1	单边曲折定位架
	GR468-8	2	单边曲折定位架
	GR1427-8	2	单边曲折定位架
28	GS273-8	1	单边曲折定位架螺钉
29	GO217-8	1	单边曲折定位架垫圈

## 摆针花模组件


### COMPONENTS OF SWAYING NEEDLE

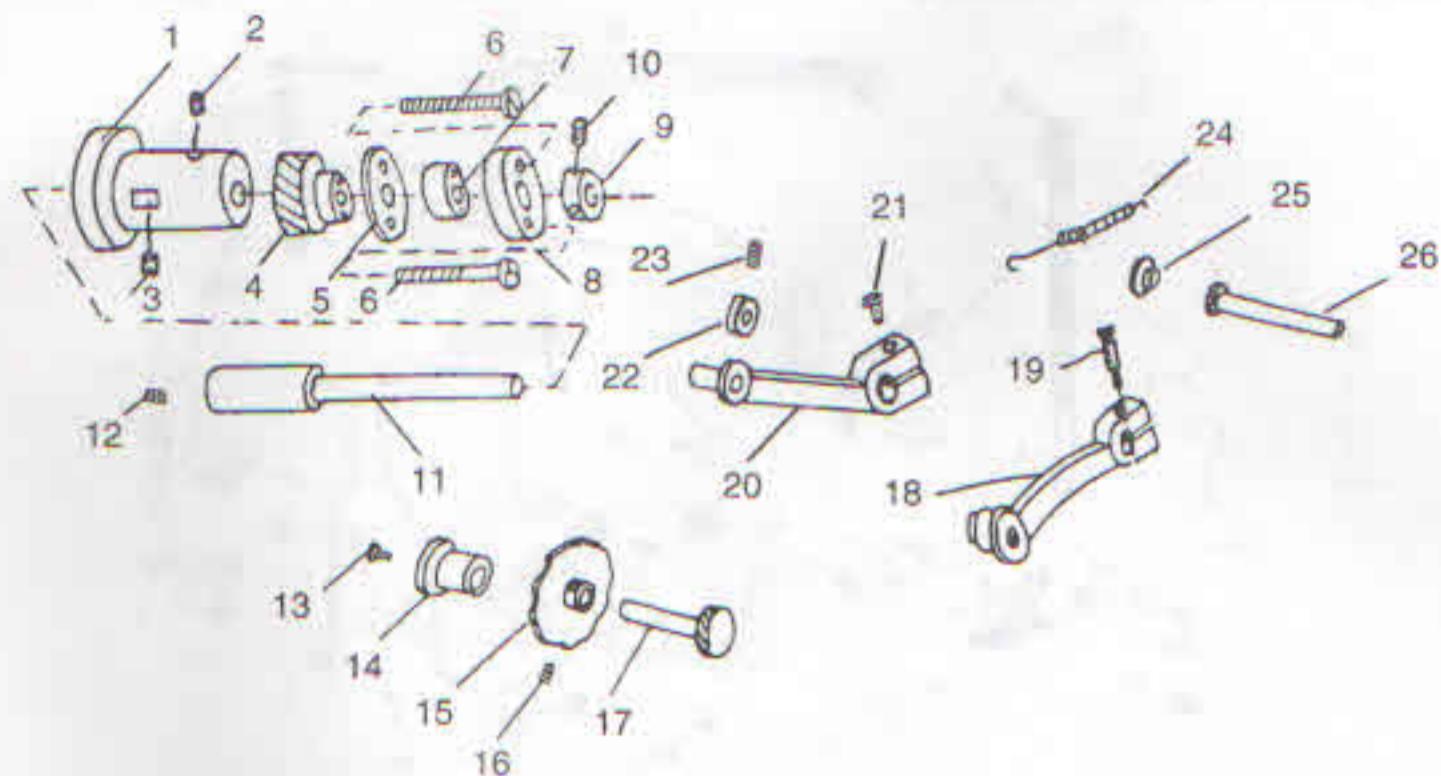

序号 NO.	件号 PART NO.	10122 200120 200130 20045 20053 20054A 2005B 20052 20163 20164 457A 457B 457C 457D	数量 QTY	名 称 DESCRIPTION
1	GO180-8	*	1	摆针轴套 Sleeve of swaying needle
2	GS199-8	*	1	摆针轴紧定螺钉 Fastening screw of swaying needle shaft
3	GS147-8	*	1	摆针轴套螺钉 Screw of sleeve of swaying needle
4	GC146-8	*	1	摆针齿轮 Gear of swaying needle
5	GO181-8	*	1	偏心挡圈 Eccentric retainer
6	GO212-8	*	1	偏心挡圈 Eccentric retainer
7	GS221-8	*	2	摆针偏心凸轮连接螺钉 Connecting screw of eccentric cam
7	GT145-8	*	1	摆针偏心凸轮 Eccentric cam
7	GT151-8	*	1	摆针偏心凸轮 Eccentric cam
7	GT181-8	*	1	摆针偏心凸轮 Eccentric cam
8	GO182-8	*	1	摆针偏心凸轮后挡圈 Back retainer of eccentric cam
8	GO213-8	*	1	摆针偏心凸轮后挡圈 Back retainer of eccentric cam
9	GO183-8	*	1	摆针轴挡圈 Retainer of swaying needle shaft
10	GS223-8	*	2	摆针轴挡圈螺钉 Screw of retainer of swaying shaft
11	GZ177-8	*	1	摆针轴 Swaying needle shaft
12	GZ203-8	*	1	摆针轴 Swaying needle shaft
12	GZ219-8	*	1	摆针轴 Swaying needle shaft
12	GS147-8	*	1	摆针轴螺钉 Screw of swaying needle shaft
13	GS166-8	*	1	倒牙螺钉 Left-hand screw
14	GO226-8	*	1	斜齿轮套 Leaning gear sleeve
15	GR461/2-8	*	1	花模组件 Cam component
15	GR1314/2-8	*	1	花模组件 Cam component
15	GR1881/2-8	*	1	花模组件 Cam component
16	GS202-8	*	1	花模套螺钉 Sleeve screw of cam component
17	GC149-8	*	1	斜齿轮 Leaning gear
17	GC175-8	*	1	斜齿轮 Leaning gear
18	GR458/3-8	*	1	拨叉驱动杆组件 Regulator fork drive lever component
19	GS285-8	*	1	驱动杆螺钉 Screw of drive lever
20	GR460/3-8	*	1	从动杆组件 Following lever component
21	GS020	*	1	从动杆螺钉 Screw of following lever
22	GO164-8	*	1	从动轴挡圈 Washer of following lever
23	GS202-8	*	1	挡圈螺钉 Washer screw
24	GW178-8	*	1	拉簧 Spring
25	GR243	*	1	橡皮塞 Rubber cap
26	GZ222-8	*	1	从动轴 Following shaft

## 压脚组件


## COMPONENTS OF PRESSER FOOT

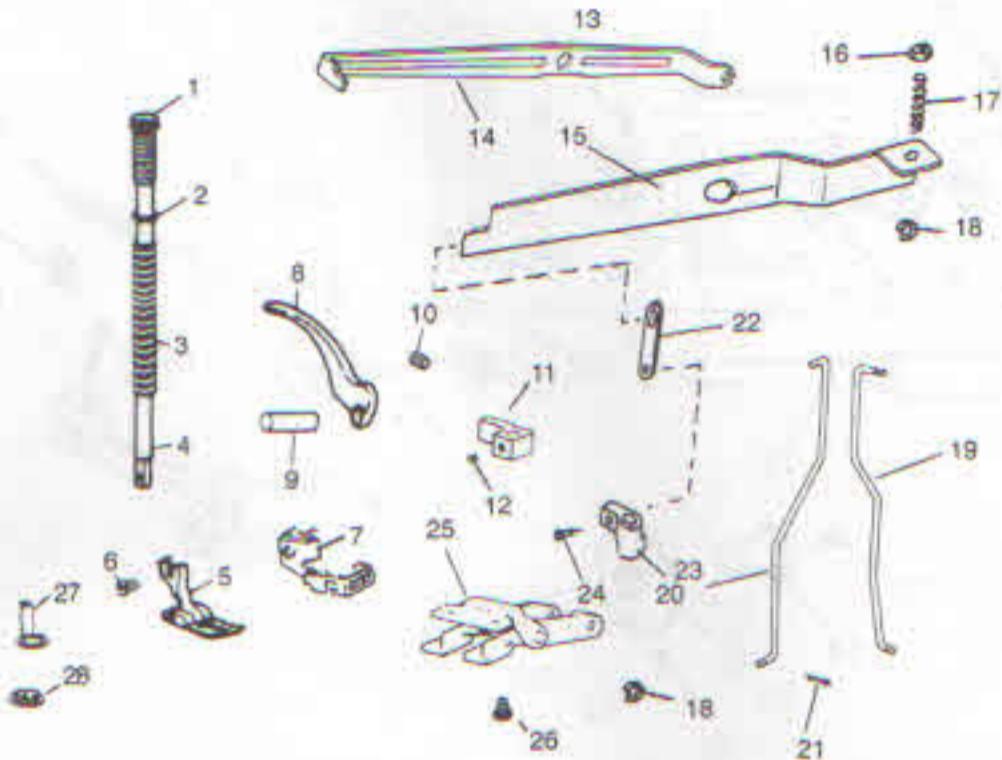

序号 NO.	件号 PART NO.	20U23 20U23D 20U23 20U43 20U43 20U53 20U53A 20U53B 20U53C 20U53E 20U63 20U143 457A 457B 457C 457D	数量 QTY	名 称 DESCRIPTION
1	GS234-8	*	Screw for presser-adjusting	
	GS384-8	*	Screw for presser-adjusting	
2	GC178-8	*	Screw for presser-adjusting	
3	GW153-8	*	Presser bar spring	
4	GZ187-8	*	Presser bar	
5	GR485/4-8	*	Presser foot component	
	GR327/4-8	*	Presser foot component	
	GR531/4-8	*	Presser foot component	
	GM206-8	*	High-low presser foot	
6	GS231-8	*	Screw of presser foot	
7	GR1000-8	*	Finger guard	
	GR1001-8	*	Finger guard	
8	GR322-8	*	Spanner	
	GR733-8	*	Spanner	
9	GX163-8	*	Spanner pin	
	GX166-8	*	Spanner pin	
10	GS232-8	*	Spanner pin screw	
11	GR324-8	*	Presser bar bracket	
	GR398-8	*	Presser bar bracket	
12	GS232-8	*	Screw of bracket	
13	GS235-8	*	Screw of presser foot lever	
14	GZ204-8	*	Presser foot lever	
	GZ217-8	*	Presser foot lever	
15	GZ188-8	*	Presser foot lever	
16	GL154-8	*	Presser bar nut	
17	GW154-8	*	Presser bar spring	
18	GO193-8	*	Presser bar washer	
19	GZ190-8	*	Rod of horizontal needle	
	GZ206-8	*	Rod of horizontal needle	
20	GZ189-8	*	Rod of presser foot	
	GZ205-8	*	Rod of presser foot	
21	GX184-8	*	Open-pin	
22	GH191-8	*	Connecting bar	
23	GR323-8	*	Locating base of plate	
24	GS233-8	*	Screw of connecting bar	
25	GR328/10-8	*	Knee-control locating base component	
26	GS236-8	*	Knee-control lever base screw	
27	GR539-8	*	Presser foot	
28	GR540-8	*	Ferrule	

## 倒顺针距组件


## COMPONENTS OF NEEDLE DISTANCE OF REVERSAL STITCH

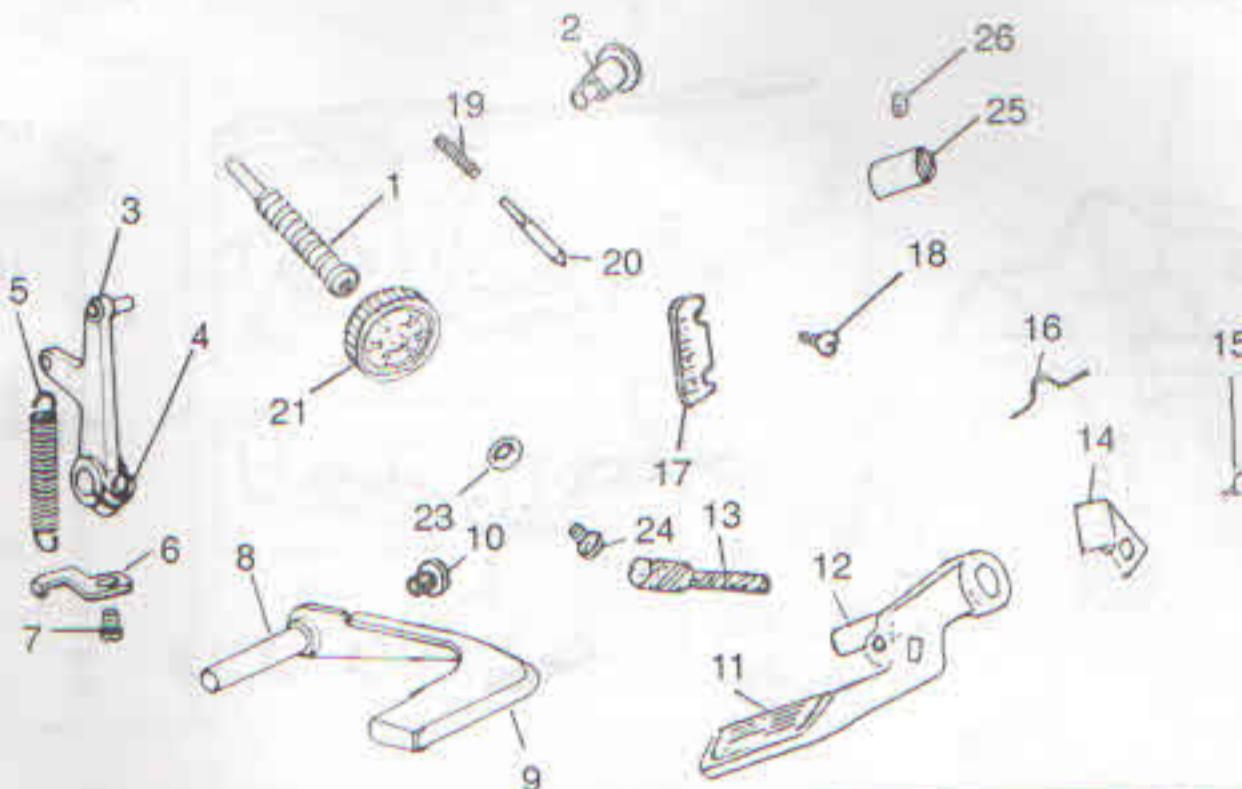

序号 NO.	件 号 PART NO.	数 量 QTY	名 称 DESCRIPTION
1	GS248-8	1	针距调节螺杆 Adjusting screw for needle distance
	GS413-8	1	针距调节螺杆 Adjusting screw for needle distance
2	GX177-8	1	针距座销 Needle distance base pin
3	GR342/2-8	1	倒针曲柄组件 Crank component
4	GS142-8	1	倒针曲柄螺钉 Crank screw
5	GW166-8	1	倒针复位拉簧 Restoring extension spring of reversal stitch
6	GR339-8	1	倒针复位拉簧钩 Spring hook
7	GS256-8	1	倒针复位拉簧钩螺钉 Screw of spring hook
8	GX178-8	1	倒针扳手轴 Reversal stitch spanner shaft
9	GR338-8	1	倒针扳手 Spanner of reversal stitch
10	GS247-8	1	倒针扳手螺钉 Screw of spanner
11	GR735-8	1	倒针扳手 Spanner of reversal stitch
12	GZ249-8	1	倒针扳手轴 Reversal stitch spanner shaft
13	GS385-8	1	倒针调节螺钉 Regulating screw of reversal stitch
14	GR736-8	1	倒针调节挡板 Regulating plate of reversal stitch
15	GS386-8	1	调节挡板螺钉 Screw of regulating plate
16	GW200-8	1	倒针调节螺钉锁紧弹簧 Regulating screw clamping spring
17	GR737-8	1	倒针调节指示牌 Feed reverse regulating indicating-dial
18	GS42	2	倒针调节指示牌螺钉 Screw of indicating-dial
19	GW167-8	1	针距定位钉压簧 Feed regulating stud lock pin spring
20	GX179-8	1	针距定位钉 Feed regulating stud lock pin
21	GR399-8	1	针距旋钮 Feed regulating dial
	GR738-8	1	针距旋钮 Feed regulating dial
23	GO380-8	1	针距旋钮螺钉垫圈 Feed regulating dial stud washer
24	GS249-8	1	针距旋钮螺钉 Feed regulating dial stud
	GS387-8	1	针距旋钮螺钉 Feed regulating dial stud
25	GO204-8	1	方牙螺套 Toothed nut
26	GS201-8	1	方牙螺套支头螺钉 Screw of toothed nut

## 附件


### ACCESSORY

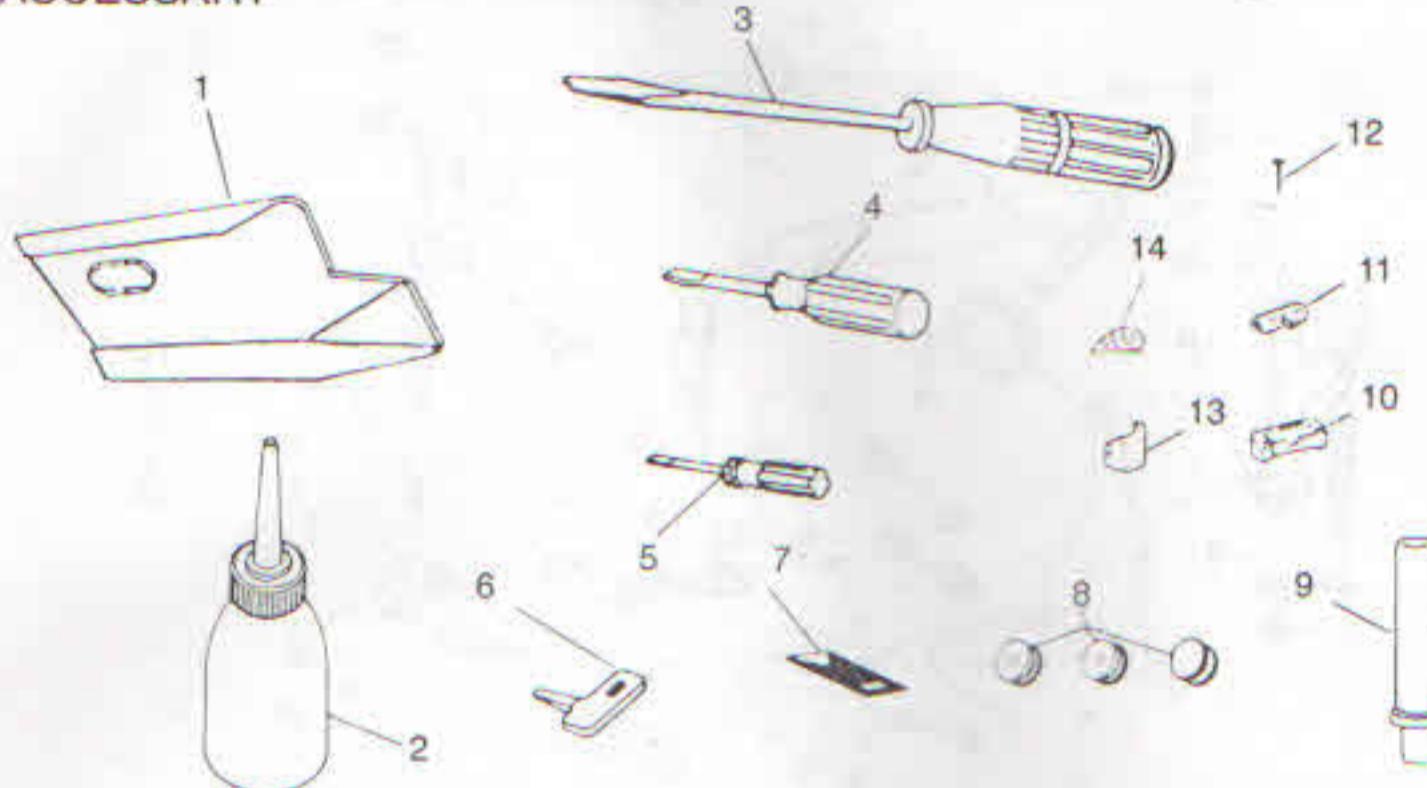

序号 NO.	件 号 PART NO.	20120	201230	20133	20143	20153	20163A	20153B	20153C	20163	20143	457A	457B	457C	457D	数 量 QTY	名 称 DESCRIPTION
1	GR351-B	*	*	-	-	-	-	-	-	-	-	1	大油盘	Oil reservoir			
	GR413-B	-	-	*	*	-	-	-	-	-	-	1	大油盘	Oil reservoir			
	GR404-B	-	-	*	*	-	-	-	-	-	-	1	大油盘	Oil reservoir			
2	GF117-B	*	*	*	*	*	*	*	*	*	*	1	油壶	Oiler			
3	GF114-B	*	*	*	*	*	*	*	*	*	*	1	螺丝刀(大)	Screwdriver(L)			
4	GF115-B	*	*	*	*	*	*	*	*	*	*	1	螺丝刀(中)	Screwdriver(M)			
5	GF116-B	*	*	*	*	*	*	*	*	*	*	1	螺丝刀(小)	Screwdriver(S)			
6	GR788-B	-	-	-	-	-	-	-	-	-	-	1	T形开刀	T-type open knife			
7	GV130-B	*	*	*	*	*	*	*	*	*	*	1	机针	Needle			
8	GN132-B	*	*	*	*	*	*	*	*	*	*	3	梭心	Bobbin			
9	GBR211-B	*	*	*	*	*	*	*	*	*	*	1	机头柱	Machine head pole			
10	GR1593	*	*	*	*	*	*	*	*	*	*	1	机头连接钉座	Machine head hinge cushion rubber			
11	GR696/2-B	*	*	*	*	*	*	*	*	*	*	1	机头连接勾部件	Machine head hinge complete			
12	GBX141-B	*	*	*	*	*	*	*	*	*	*	8	机头底圆钉	Oil reservoir nail			
13	GBR204-B	*	*	*	*	*	*	*	*	*	*	2	机头座垫	Machine head cushion			
14	GBR205-B	*	*	*	*	*	*	*	*	*	*	2	机头座垫	Machine head cushion			

# 皮带罩、过线器、绕线器、膝提组件


## BELT COVER/THREAD-RUNNING COMPONENTS/BOBBIN WINDER/KNEE LIFTER ASSEMBLY

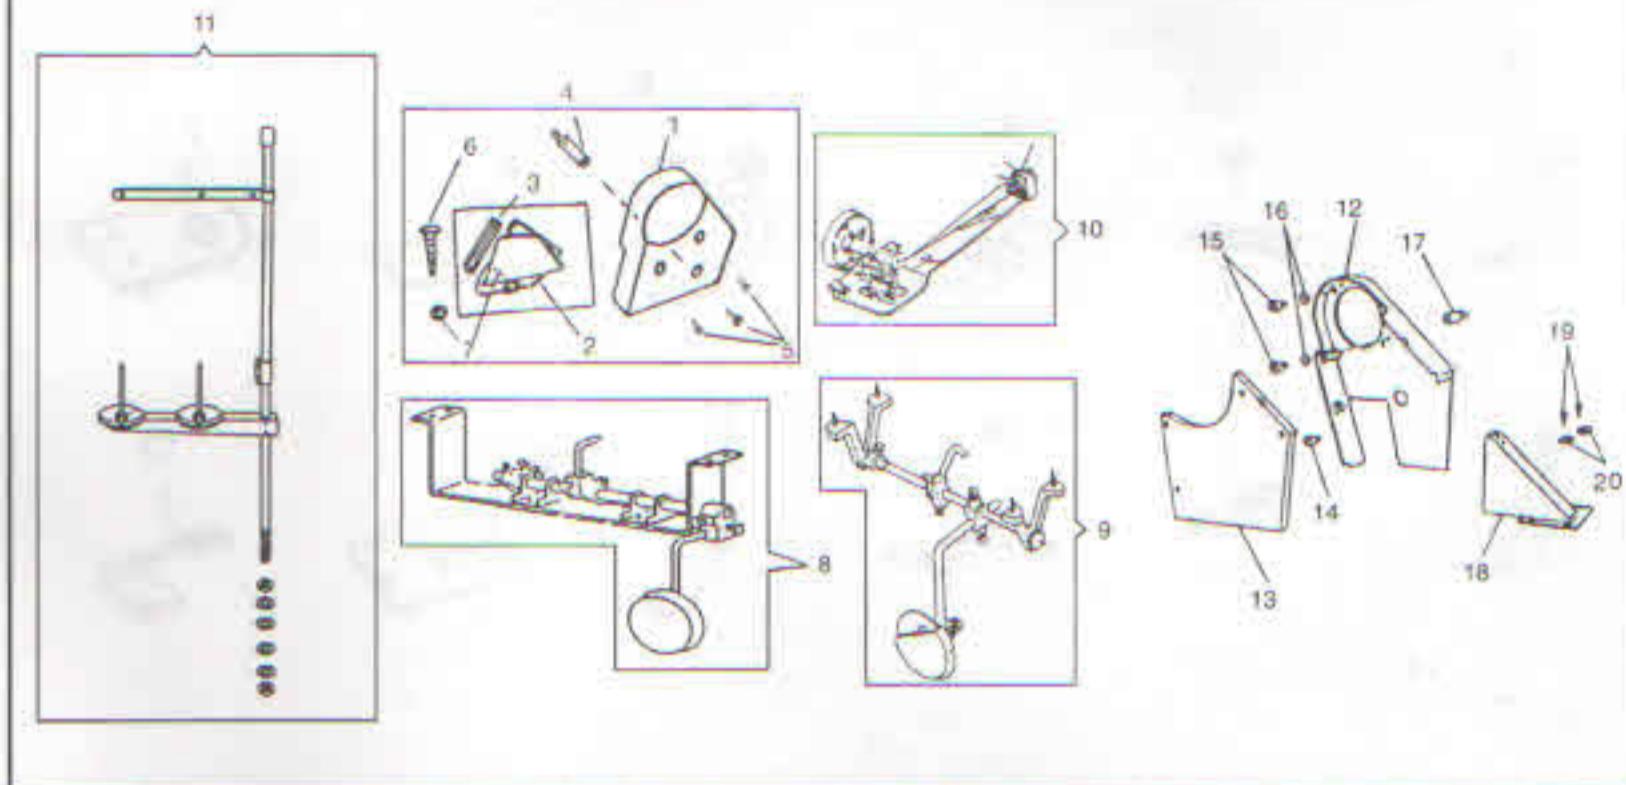

序号 NO	件号 PART NO	数量 QTY	名 称 DESCRIPTION
1	GR526-B	1	上轮罩壳 Hand wheel cover
2	GK155-B	1	上轮后罩壳 Hand wheel back cover
3	GK156-B	1	上轮后罩壳盖 Hand wheel back cover cap
4	GS654-B	1	后罩壳支柱 Back cover pole
5	GS360-B	1	罩壳支柱螺钉 Pole screw
6	GBS204-B	1	后罩壳安装木螺钉 Back cover wood screw
7	GBR210-B	1	木螺钉垫圈 Wood screw washer
8	GR1315/1B-B	1	膝提组件 Knee lifter complete
9	GR1110/1B-B	1	膝提组件 Knee lifter complete
10	GR759/25-B	1	绕线器部件 Thread-winding component
11	GR760/25-B	1	双线图架组件 Thread stand
12	GS3341-B	1	防护罩前盖板 Belt gnard (upper)
13	GS2330-B	1	防护罩面盖板 Belt gnard (upper) cover
14	GR3342-B	1	防护罩大螺钉 Belt gnard (upper) screw
15	GR3343-B	2	防护罩小螺钉 Belt gnard (upper) screen
16	GO2332-B	2	小螺钉垫片 Belt gnard (upper) screen washer
17	GS3344-B	1	支承螺钉 Belt gnard (upper) screen stand
18	GR2332-B	1	皮带后罩 Belt gnard (lower)
19	GS204-B	2	皮带后罩螺钉 Belt gnard (lower) wood screw
20	GR210-B	2	螺钉垫圈 Belt gnard (lower) wood screw washer

## 备用件

## STANDBY PARTS

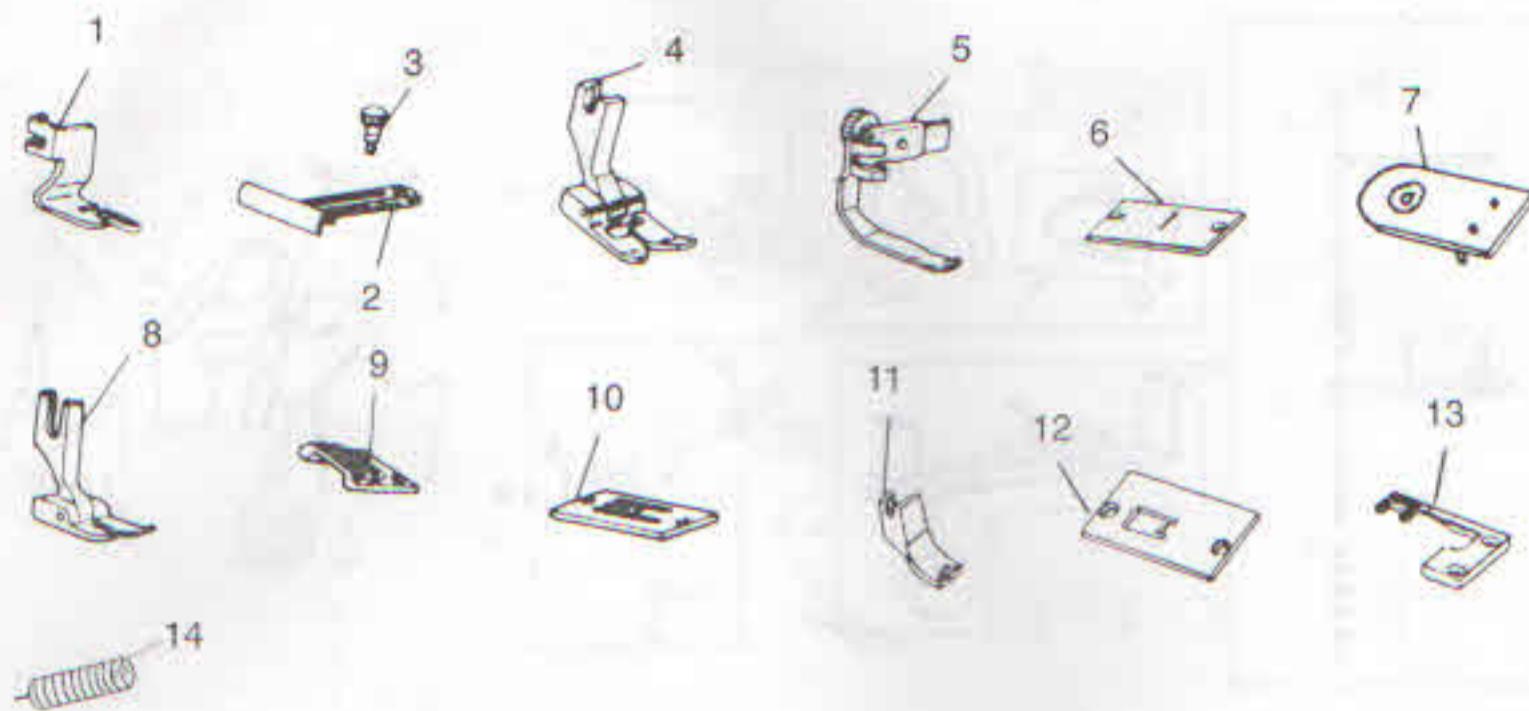

序号 NO.	件 号 PART NO.	数 QTY	名 称 DESCRIPTION
1	FM108-B	1	包边压脚 Hemmer foot
2	FM105-B	1	包边挡板 Hemmer edge guide
3	GS655-B	1	包边挡板螺钉 Hwm edge guide screw
4	GM172-B	1	扣眼压脚 Bottomhole foot
5	FM109/3-B	1	拉链缝压脚组件 Zipper foot complete
6	GM134-B	1	绣花板 Embroidery plate
7	GM134/4-B	1	绣花板 Embroidery plate
8	FM107/4-B	1	平缝压脚部件 Straight stitch foot complete
9	FM106-B	1	平缝送料牙 Straight stitch feed dog
10	FM104-B	1	平缝针板 Straight stitch throat plate
11	FM103-B	1	包梗压脚 Hem stem presser foot
12	FM100-B	1	包梗针板 Hem stem needle plate
13	FM101-B	1	包梗送料牙 Hem stem feed dog
14	GS200-B	2	上轮螺钉 Upper wheel screw